

Component Locations

[N112 – Secondary Air Injection \(AIR\) solenoid valve \(2.8 ltr. engine\)](#)

[N112 – Secondary Air Injection \(AIR\) solenoid valve \(1.8 ltr. engine\)](#)