



12 Ground Connection

- in engine compartment, left rear, on bulkhead behind coolant reservoir