



16 Ground Connection

- on top of valve cover, front, between cylinders 1 and 2