



44 Ground Connection

- below instrument panel, on lower A-pillar, left side
- includes both posts