



606 Ground Connection

- on central tunnel, left-side, under center console at shifter