



G169 Fuel supply sensor 2

- accessed through luggage compartment floor, located on top of fuel tank