



G22 - Speedometer Vehicle Speed Sensor (VSS)

- Sender is located on transmission housing, left, near drive flange