



G81 Fuel Temperature Sensor

- in engine compartment, driver's side, attached to fuel line