


Relay arrangement

Relay location on relay panel

- 1** - Dual Horn Relay (204)
- 2** - Load Reduction Relay (213)
- 3** - free
- 4** - Fuel Pump (FP) Relay (208)
- V** - Wiper/Washer Intermittent Relay (377)
- VI** - Wiper/Washer Intermittent Relay (377)


Fuses on relay panel

- A** - Fuse for socket I in luggage compartment
- B** - Fuse for socket II in luggage compartment

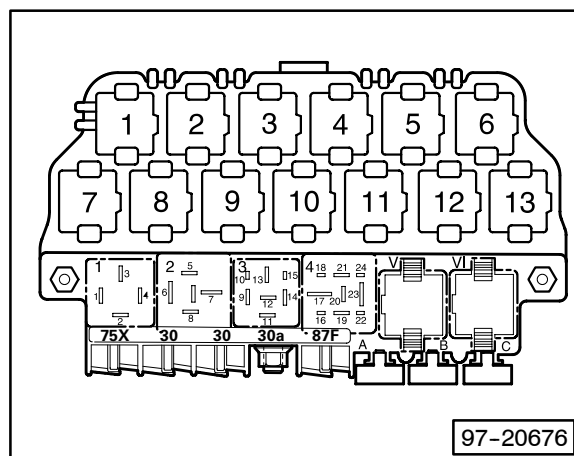

Relay arrangement on thirteenfold auxiliary relay panel above relay panel

- 1** - Coolant Fan Control (FC)-A/C Relay (214)
- 2** - Relay for motor remote unlock rear lit (79)
- 3** - A/C Clutch relay (267)
- 4** - A/C Clutch control module relay (384)
- 5** - free
- 6** - Selector Lever Light Relay (205)
- 7** - Fog Light Relay (381)
- 8** - Daytime Running Lights Change-Over Relay (173)
- 9** - free
- 10** - Glow Plug Relay (180)
- 11** - Change Over Relay For Speaker Radio/Telephone
- 12** - Starting Interlock Relay-Alarm System (186)
- 13** - Park/Neutral Position (PNP) Relay (175)
 - Starting Interlock Relay-Clutch Position (204)

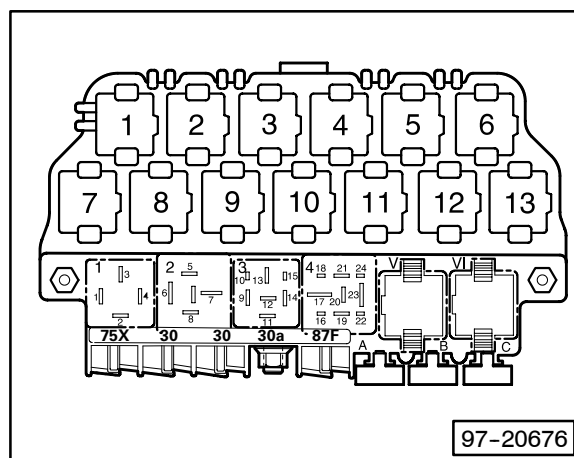


Relay arrangement

Relay location on relay panel

- 1** - Dual Horn Relay (204)
- 2** - Load Reduction Relay (213)
- 3** - free
- 4** - Fuel Pump (FP) Relay (208)
- V** - Wiper/Washer Intermittent Relay (377)
- VI** - Wiper/Washer Intermittent Relay (377)


Fuses on relay panel

- A** - Fuse for socket I in luggage compartment
- B** - Fuse for socket II in luggage compartment

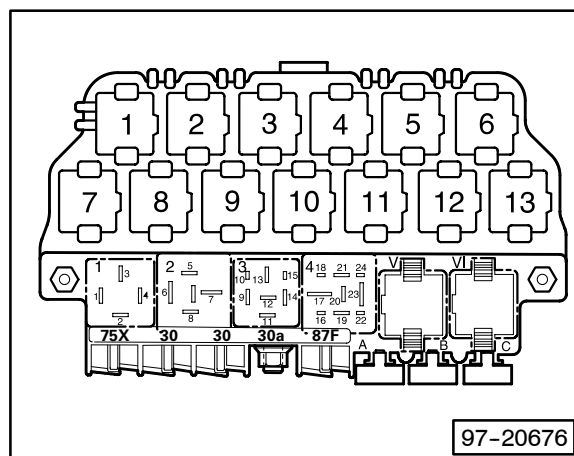

Relay arrangement on thirteenfold auxiliary relay panel above relay panel


- 1** - Coolant Fan Control (FC)-A/C Relay (214)
- 2** - Relay for motor remote unlock rear lit (79)
- 3** - A/C Clutch relay (267)
- 4** - A/C Clutch control module relay (384)
- 5** - free
- 6** - Selector Lever Light Relay (205)
- 7** - Fog Light Relay (381)
- 8** - Daytime Running Lights Change-Over Relay (173)
- 9** - free
- 10** - Glow Plug Relay (180)
- 11** - Change Over Relay For Speaker Radio/Telephone
- 12** - Starting Interlock Relay-Alarm System (186)
- 13** - Park/Neutral Position (PNP) Relay (175)
 - Starting Interlock Relay-Clutch Position (204)

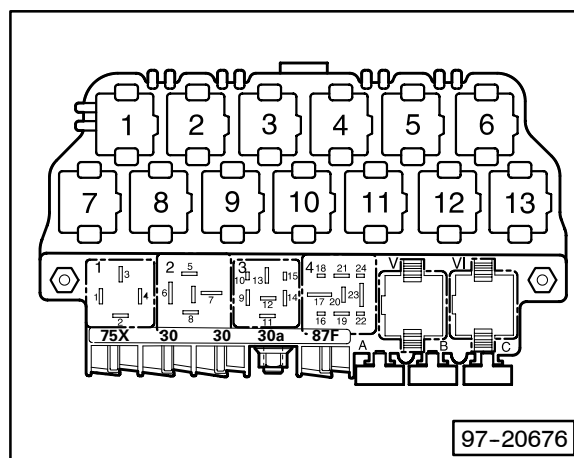

Relay arrangement of eightfold auxiliary relay panel behind relay panel

Relay locations on eightfold auxiliary relay panel

- 1** - free
- 2** - free
- 3** - free
- 4** - free
- 5** - Coolant Fan Control (FC) Relay (214), 80W
- First Speed Coolant Fan Control (FC) Relay (214), 300W
- 6** - Radiator Fan Afterrun Relay (214)
- 7** - free
- 8** - Second Speed Coolant Fan Control Relay(213),300W

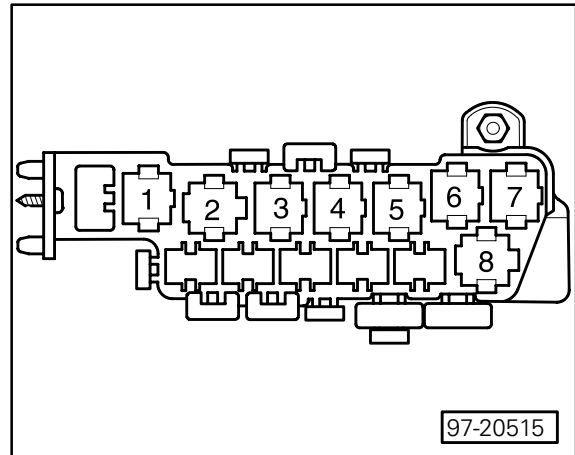

Fuses at eightfold auxiliary relay panel


- ◆ Coolant Fan Fuse 5A
- ◆ Coolant Fan Fuse 30A
- ◆ ABS Hydraulic Pump Fuse 50A

Relays and fuses in protective housing for control module, in plenum, left

- ◆ Relay For Preheating, Low Heat Output (373)
- ◆ Relay For Preheating, High Heat Output (370)
- ◆ Power Supply (Terminal 30, B+) Relay (219)
- ◆ Secondary Air Pump Relay (203)
- ◆ Engine Control Module (ECM) 15A
- ◆ Glow Plug Fuse - Engine 40A
- ◆ Glow Plug Fuse - Engine 40A
- ◆ Glow Plug Fuse - Coolant 25A
- ◆ Glow Plug -2- Fuse - Coolant 50A

Connector arrangement at protective housing for control module, in plenum, left


	Color	from wiring harness	to wiring harness
1	black	Instrument Panel	Engine Compartment, right
2	brown	Instrument Panel	Engine Compartment, right
3	red	Instrument Panel	Engine Compartment, right
4	yellow	Instrument Panel	Engine Compartment, right
5	blue	Instrument Panel	Engine Compartment, right
6	white	Instrument Panel	Engine Compartment, right

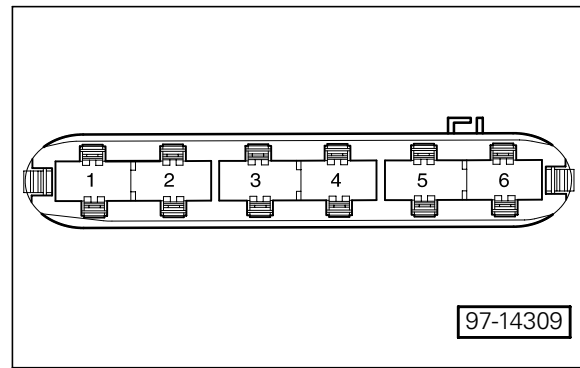

Connector arrangement of connector station A-pillar, left

Connector station A-pillar, left


	Color	from wiring harness	to wiring harness
1	green	Roof	Instrument Panel
2	black	Floor	Door, left front
3	red	Floor	Roof
4	black	Cruise Control	Instrument Panel
5	yellow	free	free
6	blue	Floor	Instrument Panel
7	black	Speaker	Instrument Panel
8	brown	Floor	Instrument Panel
9	red	Headlamp, left	Instrument Panel
10	pink	Headlamp, left	Instrument Panel
11	blue	Floor	Instrument Panel
12	white	Floor / Navigation	Instrument Panel
13	green	Headlamp, left	Instrument Panel
14	grey	Coolant Fan	Instrument Panel
15	orange	ABS	Instrument Panel
16	grey	Floor	Door, left front
17	violet	Wiper motor	Instrument Panel
A	black	Roof	Instrument Panel
B	brown	Washer System	Instrument Panel
C	black	Instrument Panel	Outside Air Temperature Display
D	yellow	Airbag	Instrument Panel

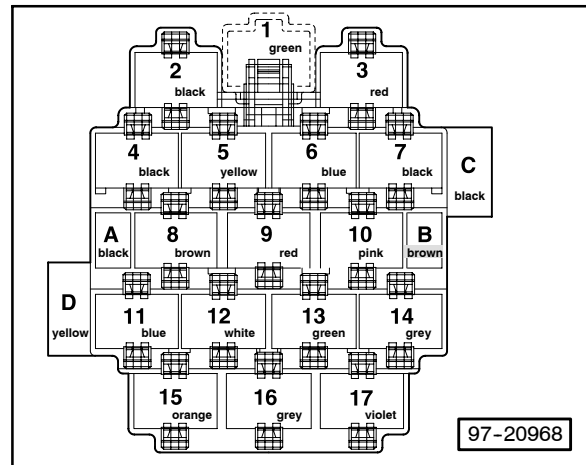

Connector arrangement of connector station A-pillar, right

Connector station A-pillar, right


	Color	from wiring harness	to wiring harness
1	violet	Floor	Instrument Panel
2	red	CD Changer Unit	Instrument Panel
3	black	Floor	Door, right front
4	black	Speaker	Instrument Panel
5	blue	free	free
6	yellow	free	free
7	black	Floor / Rear Wisher	Instrument Panel
8	pink	Headlamp, right	Instrument Panel
9	red	Headlamp, right	Instrument Panel
10	brown	4 Speed Automatic Transmission	Instrument Panel
11	grey	ABS	Instrument Panel
12	green	Airbag / Heated Seats	Instrument Panel
13	white / darkbrown	Floor	Instrument Panel
14	blue	4 Speed Automatic Transmission	Instrument Panel
15	violet	Daytime Running Light	Instrument Panel
16	grey / darkbrown	Floor	Instrument Panel
17	orange	Telephone	Instrument Panel
A	brown	Airbag	Floor
B	black	Airbag	Instrument Panel
C	black	free	free
D	yellow	Airbag	Instrument Panel

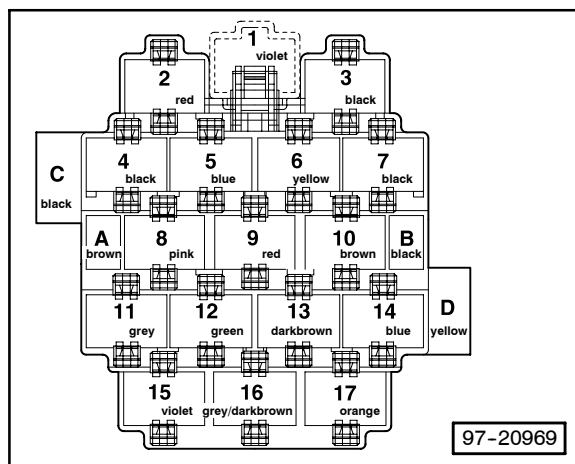

Fuse arrangement in fuse panel, behind instrument cluster, left

Fuse colors

30 A	-	green
25 A	-	white
20 A	-	yellow
15 A	-	blue
10 A	-	red
7,5 A	-	brown
5 A	-	beige
3 A	-	violet

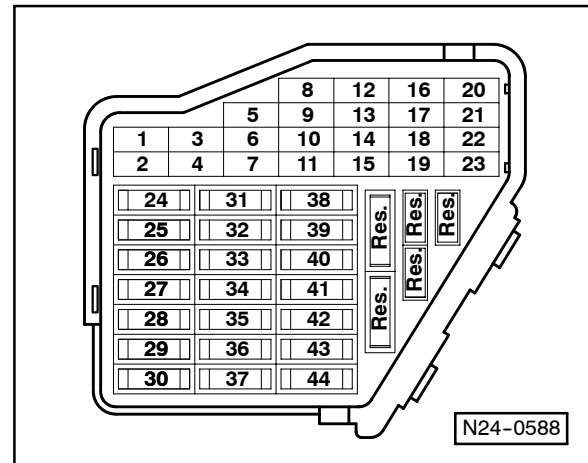

Fuses S24 to S44 are identified with additional prefix 2 in wiring diagram

Example: fuse S40 on fuse panel is listed as S240 in wiring diagram

Fuses:

1	-	Heated washer nozzle	5 A	23	-	Parklight, left	5 A
2	-	Turn signal system	10 A	24	-	Wiper system	25 A
3	-	Light for glove compartment, air conditioning, selector lever	5 A	25	-	Fresh air blower, recirculating control, air conditioning	30 A
4	-	License plate light	5 A	26	-	Rear window defogger	30 A
5	-	Instr. cluster, heated seats, cruise control test plug, air conditioning	10 A	27	-	Rear window wiper system	15 A
6	-	Control module comfort system	5 A	28	-	Fuel pump (FP)	15 A
7	-	ABS	10 A	29	-	Engine control	20 A
8	-	Automatic headlight beam adjusting, telephone system	5 A	30	-	Sunroof	20 A
9	-	free	10 A	31	-	Back-up lights, cruise control, automatic transmission	15 A
10	-	CD changer unit	5 A	32	-	Engine control	20 A
11	-	Cruise control by automatic transmission	5 A	33	-	Cigarette lighter	15 A
12	-	B+(battery positiv voltage) for on board diagnostic (OBD)	10 A	34	-	Engine control, injectors	15 A
13	-	Brake lights	10 A	35	-	Trailer socket	30 A
14	-	Comfort system	10 A	36	-	Fog lights	15 A
15	-	Instr. cluster, automatic transmission	10 A	37	-	Radio system, telephone system	20 A
16	-	free	5 A	38	-	Comfort system	15 A
17	-	Navigation	10 A	39	-	Emergency flasher system	15 A
18	-	Right headlight, high beam	10 A	40	-	Dual horn	25 A
19	-	Left headlight, high beam	10 A	41	-	free	25 A
20	-	Right headlight, low beam	15 A	42	-	free	25 A
21	-	Left headlight, low beam	15 A	43	-	free	10 A
22	-	Parklight, right	5 A	44	-	Heated seats	30 A