

Starter does not crank

Test conditions:

- ◆ Battery voltage OK.
- ◆ Starter solenoid terminals and ground strap connections between engine, body and battery must be tight and must not be corroded/oxidized.

For troubleshooting is required:

- ◆ Sun VAT 40 or Fluke 83
- ◆ Connector Test Kit VW 1594
- ◆ Valid wiring diagram

- 1 - Terminal 30 - from battery
- 2 - Terminal 50 - from ignition starter switch
- 3 - Terminal 15a
- 4 - Connection for field windings

