


Heated seats,

from September 1997


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

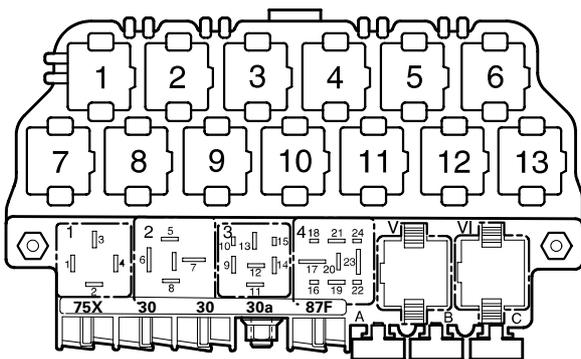

97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

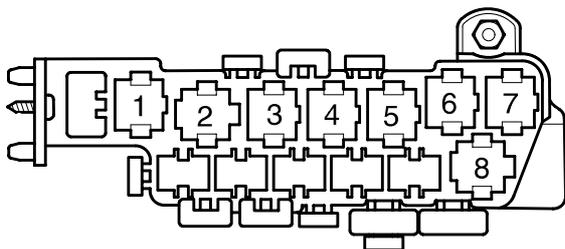


97-20515

Relay location on the eightfold auxiliary relay panel, behind relay panel:

Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

Note: Number in parentheses indicates production control number stamped on relay housing.

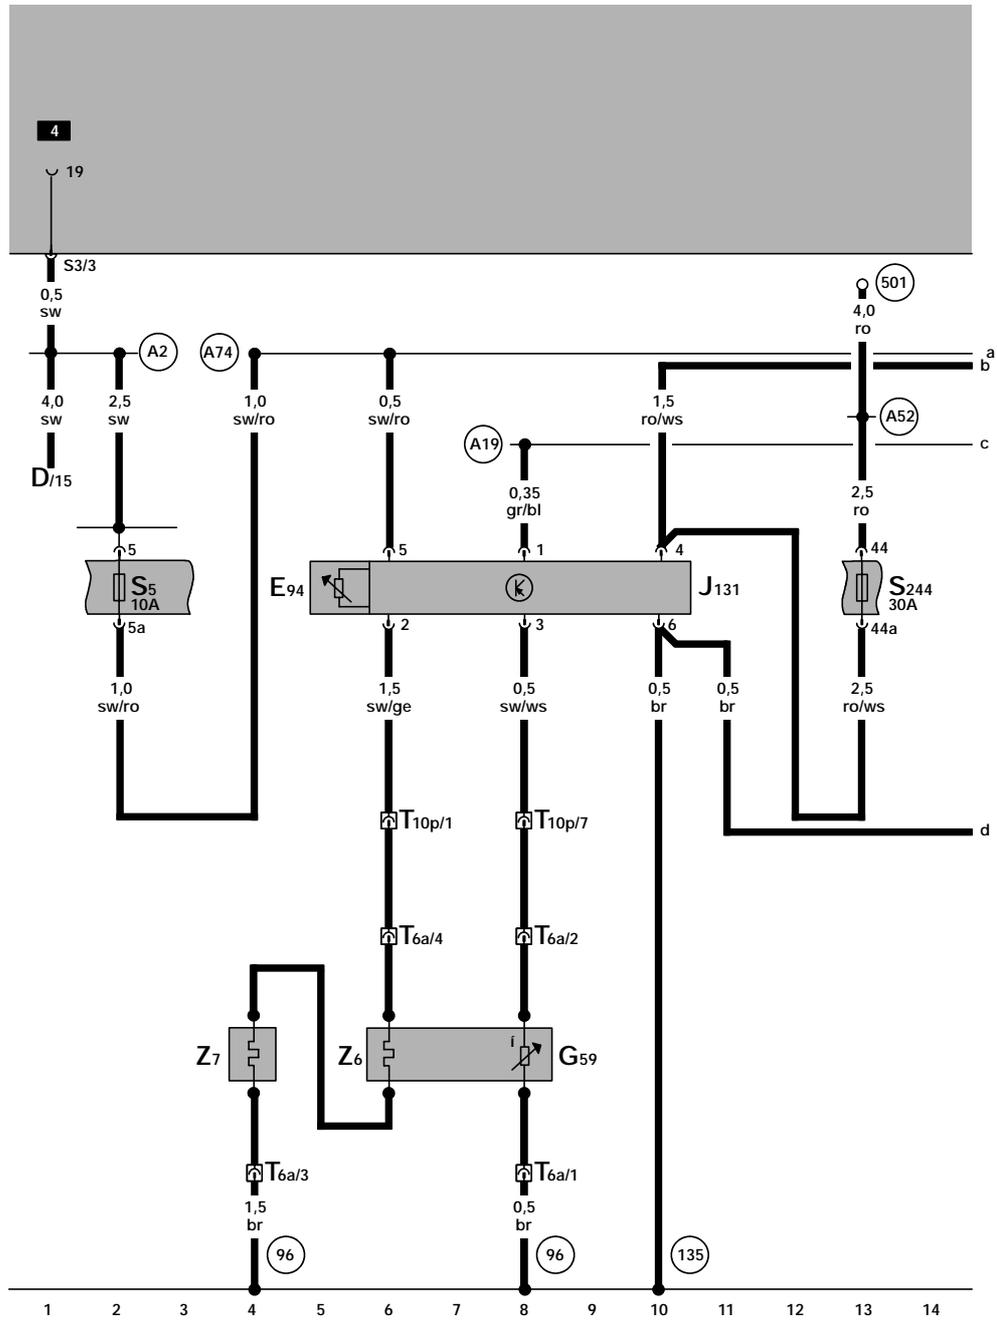


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- D - Ignition/Starter Switch
- E94 - Adjuster for heated driver's seat
- G59 - Driver's Heated Seat Temperature Sensor
- J131 - Driver's Heated Seat Control Module
- S5 - Fuse 5 in fuse holder
- S244 - Fuse 44 in fuse holder
- T6a - 6-Pin Connector, green
- T10p - 10-Pin Connector, brown, connector station A-pillar, right
- Z6 - Driver's Seat Heating Element
- Z7 - Driver's Backrest Heating Element

- (501) - Screw connection -2- (30), on relay panel
- (A2) - plus connection (15), in instrument panel wiring harness
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A52) - plus connection (30), in instrument panel wiring harness
- (A74) - Connector (15a - fuse 5), in instrument panel wiring harness

- (96) - Ground connection -1-, in heated seats wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness

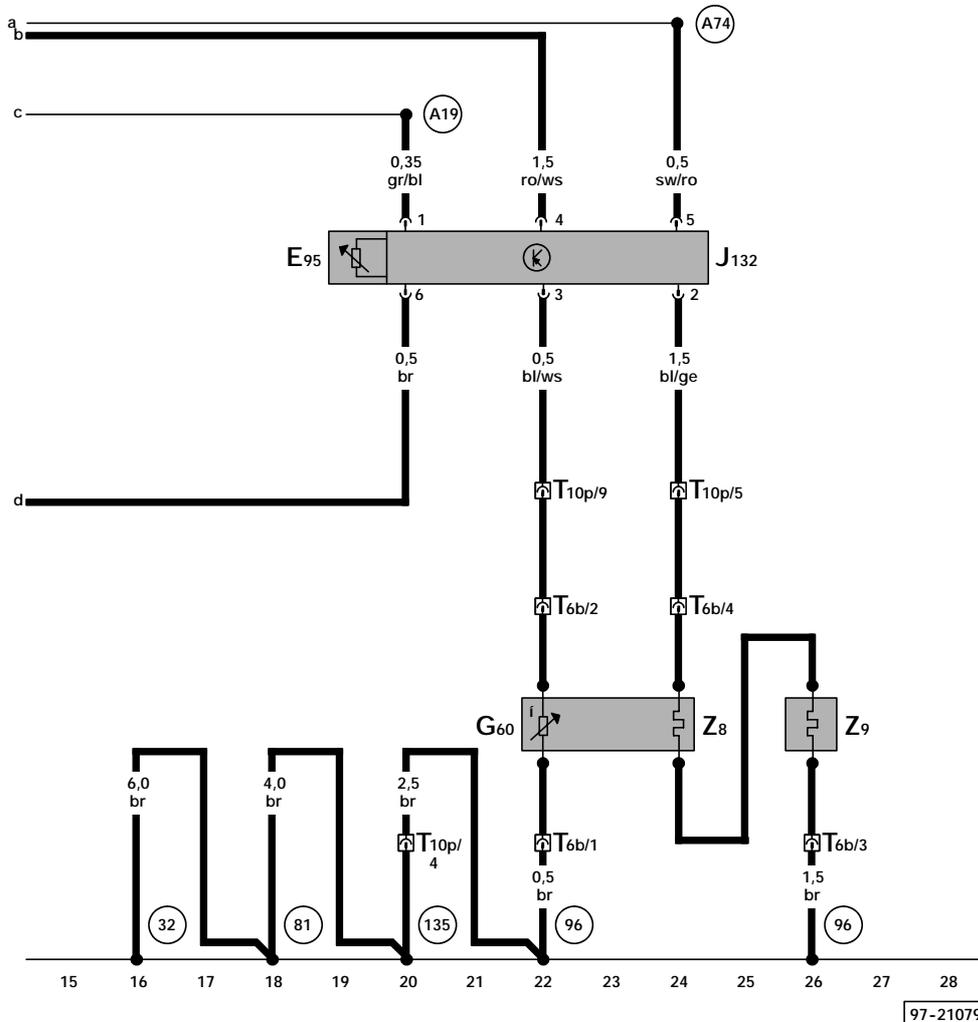

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E95 - Adjuster for heated passenger seat
- G60 - Passenger's Heated Seat Temperature Sensor
- J132 - Passenger's Heated Seat Control Module
- T6b - 6-Pin Connector, green
- T10p - 10-Pin Connector, brown, connector station A-pillar, right
- Z8 - Passenger's Seat Heating Element
- Z9 - Passenger's Backrest Heating Element

- (135) - Ground connection -2-, in instrument panel wiring harness
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A74) - Connector (15a - fuse 5), in instrument panel wiring harness

- (32) - Ground connection, behind instrument panel, left
- (81) - Ground connection -1-, in instrument panel wiring harness
- (96) - Ground connection -1-, in heated seats wiring harness