



Radio System, only for vehicles with green illuminated instrument cluster

from September 1997

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

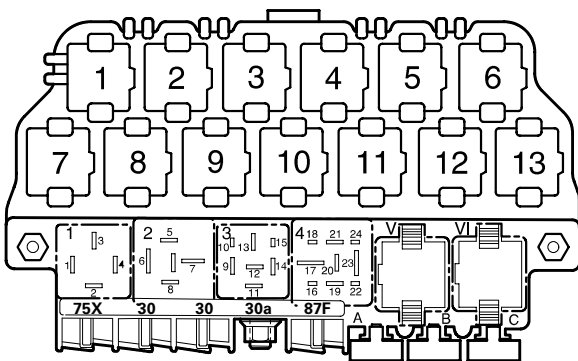


97-20676

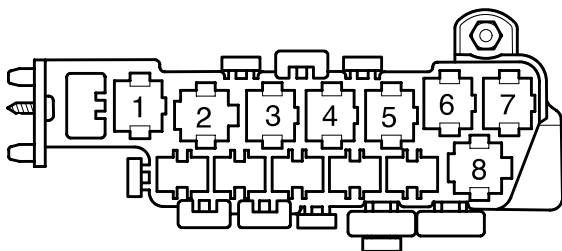

97-20515

Fuse colors


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

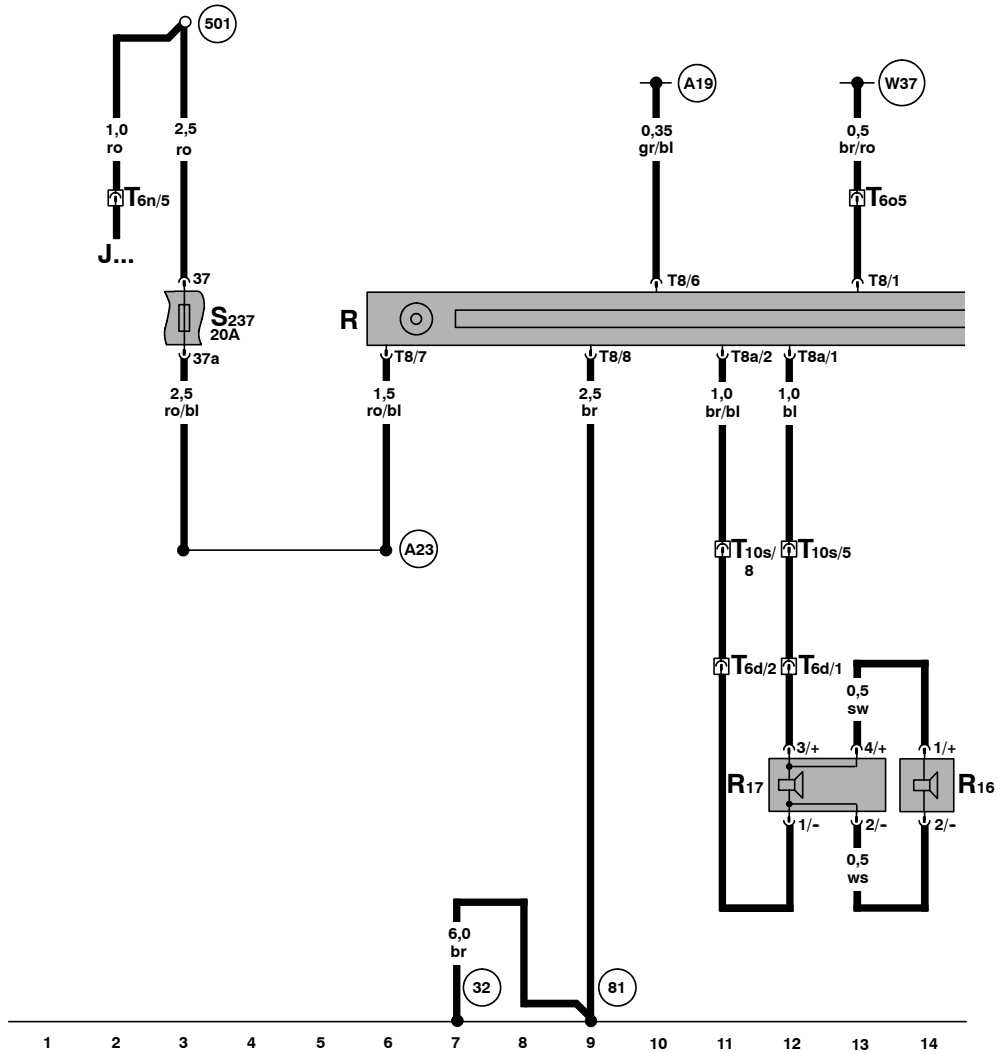

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow


- J... - Engine Control Module (ECM)
- R - Radio
- R16 - Treble speaker, right rear, in right rear door
- R17 - Bass speaker, right rear, in right rear door
- S237 - Fuse 37 in fuse holder
- T6d - 6-Pin Connector, red, on B-pillar, right
- T6n - 6-Pin Connector, red, on protective housing for control module
- T6o - 6-Pin Connector, white, connector station A-pillar, right
- T8 - 8-Pin Connector, black, on radio
- T8a - 8-Pin Connector, brown, on radio
- T10s - 10-Pin Connector, white, connector station A-pillar, right

- (32) - Ground connection, behind instrument panel, left
- (81) - Ground connection -1-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A23) - wire connection (30al), in instrument panel wiring harness
- (W37) - Connection (DWA), in floor wiring harness

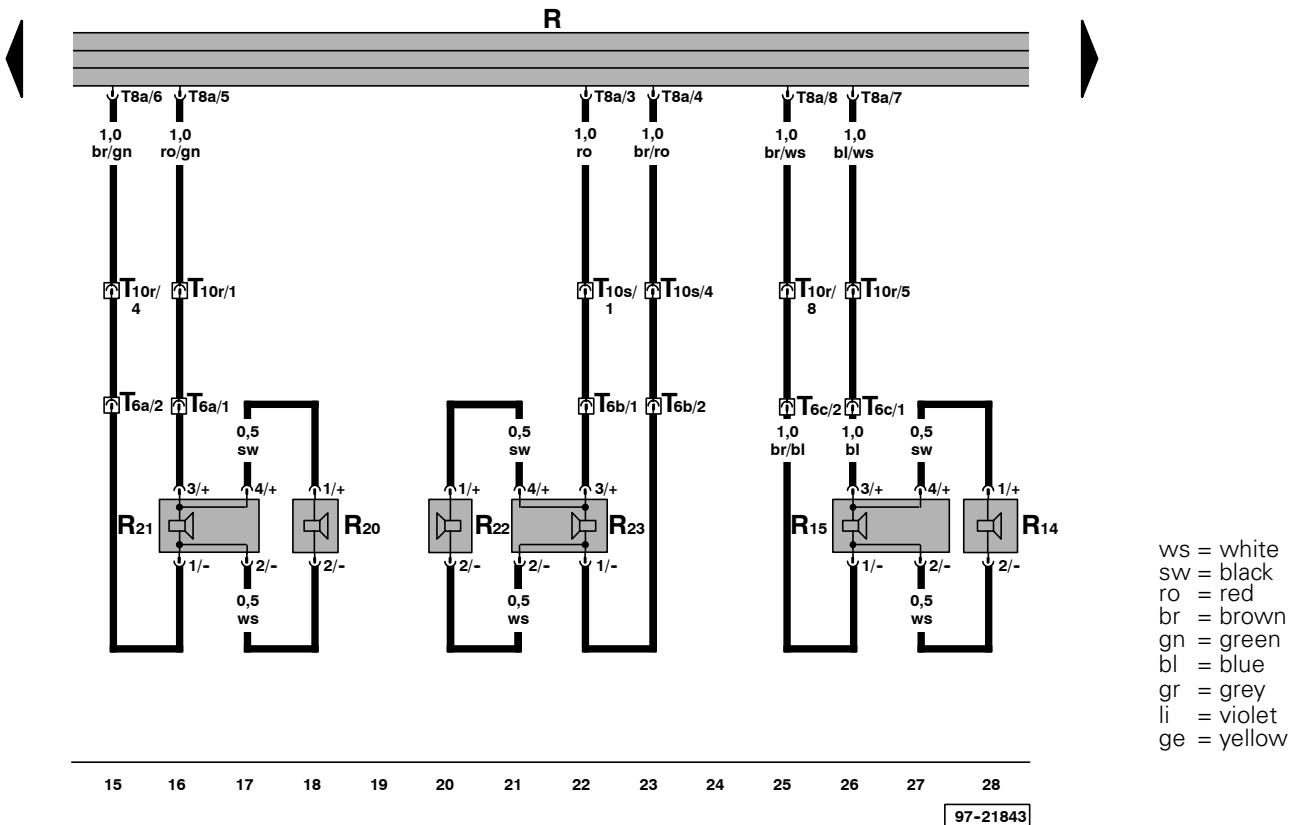

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- R - Radio
- R14 - Treble speaker, left rear, in left rear door
- R15 - Bass speaker, left rear, in left rear door
- R20 - Treble speaker, left front, in driver's door
- R21 - Bass speaker, left front, in driver's door
- R22 - Treble speaker, right front, in passenger's door
- R23 - Bass speaker, right front, in passenger's door
- T6a - 6-Pin Connector, yellow, connector station A-pillar, left
- T6b - 6-Pin Connector, yellow, connector station A-pillar, right
- T6c - 6-Pin Connector, red, on B-pillar, left
- T8a - 8-Pin Connector, brown, on radio
- T10r - 10-Pin Connector, white, connector station A-pillar, left
- T10s - 10-Pin Connector, white, connector station A-pillar, right

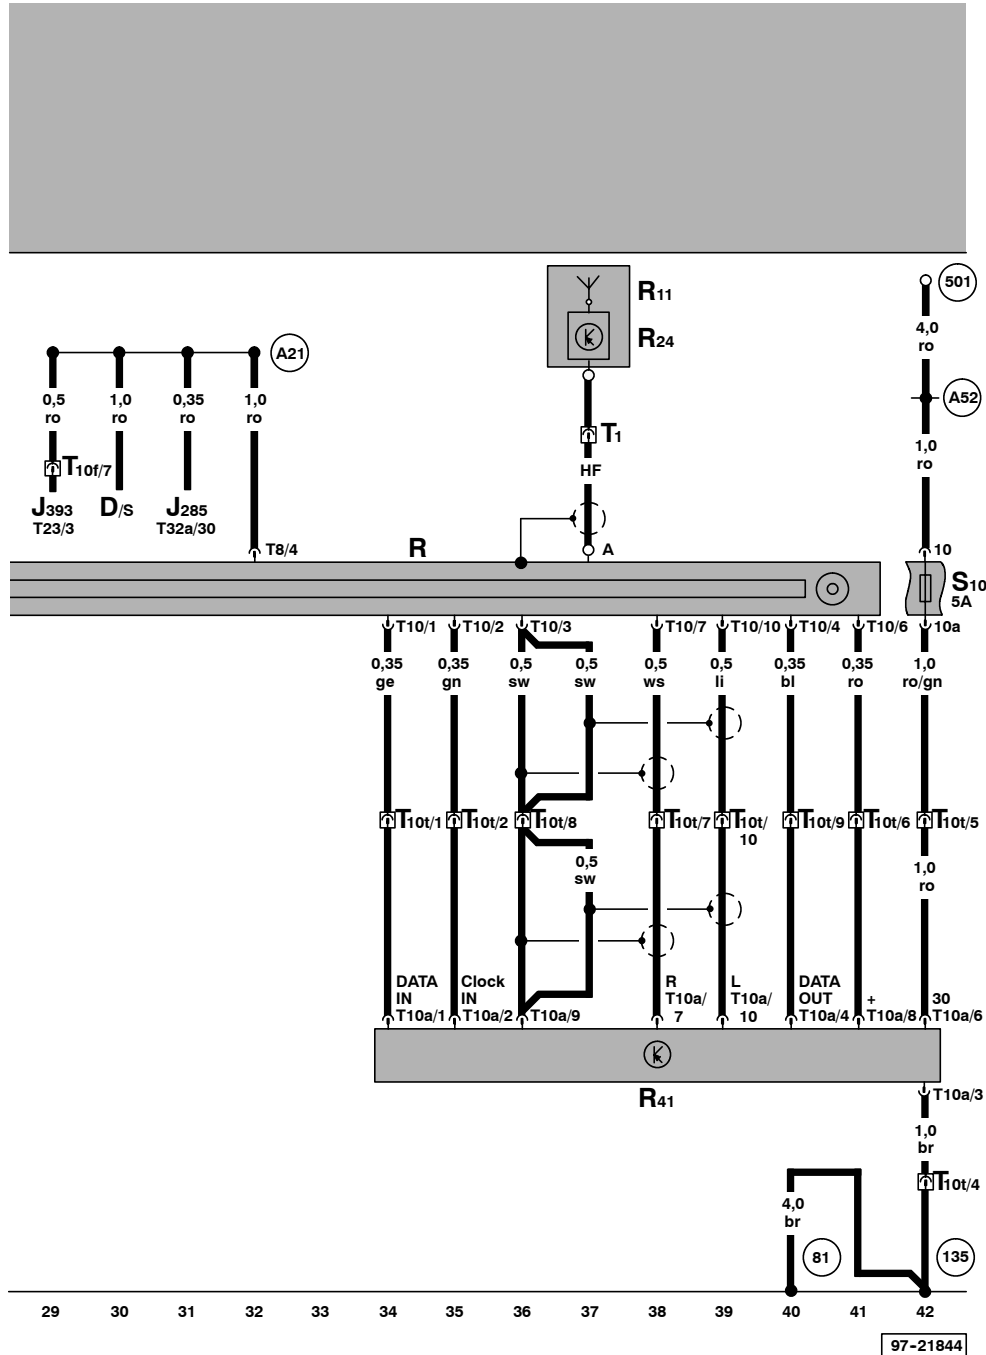

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- D - Ignition/Starter Switch
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- R41 - CD Changer Unit, in luggage compartment
- S10 - Fuse 10 in fuse holder
- T1 - 1-Pin Connector, black, below console
- T8 - 8-Pin Connector, black, on radio
- T10 - 10-Pin Connector, red, on radio
- T10a - 10-Pin Connector, red, on CD Changer Unit
- T10f - 10-Pin Connector, blue, connector station A-pillar, left
- T10t - 10-Pin Connector, black, connector station A-pillar, right

- T23 - 23-Pin Connector, on central control module for comfort system
- T32a - 32-Pin Connector, blue, on instrument cluster

- (81) - Ground connection -1-, in instrument panel wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness
- (501) - Threaded connection -2- (30) on the relay plate
- (A21) - wire connection (86s), in instrument panel wiring harness
- (A52) - plus connection (30), in instrument panel wiring harness