


Power seats and mirror adjustment with Memory

from November 1997


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

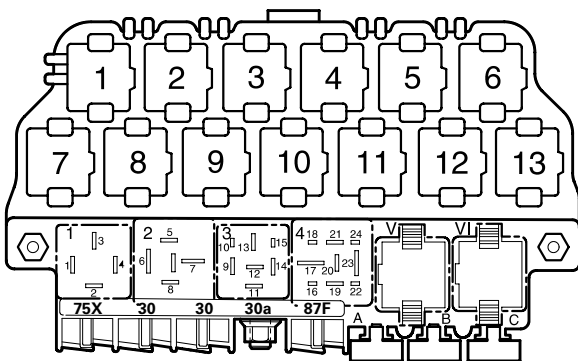

97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

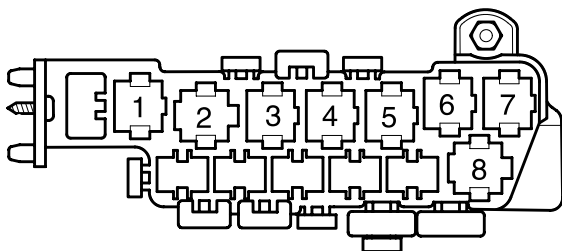


97-20515

Relay location on the eightfold auxiliary relay panel, behind relay panel:

Fuse colors


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

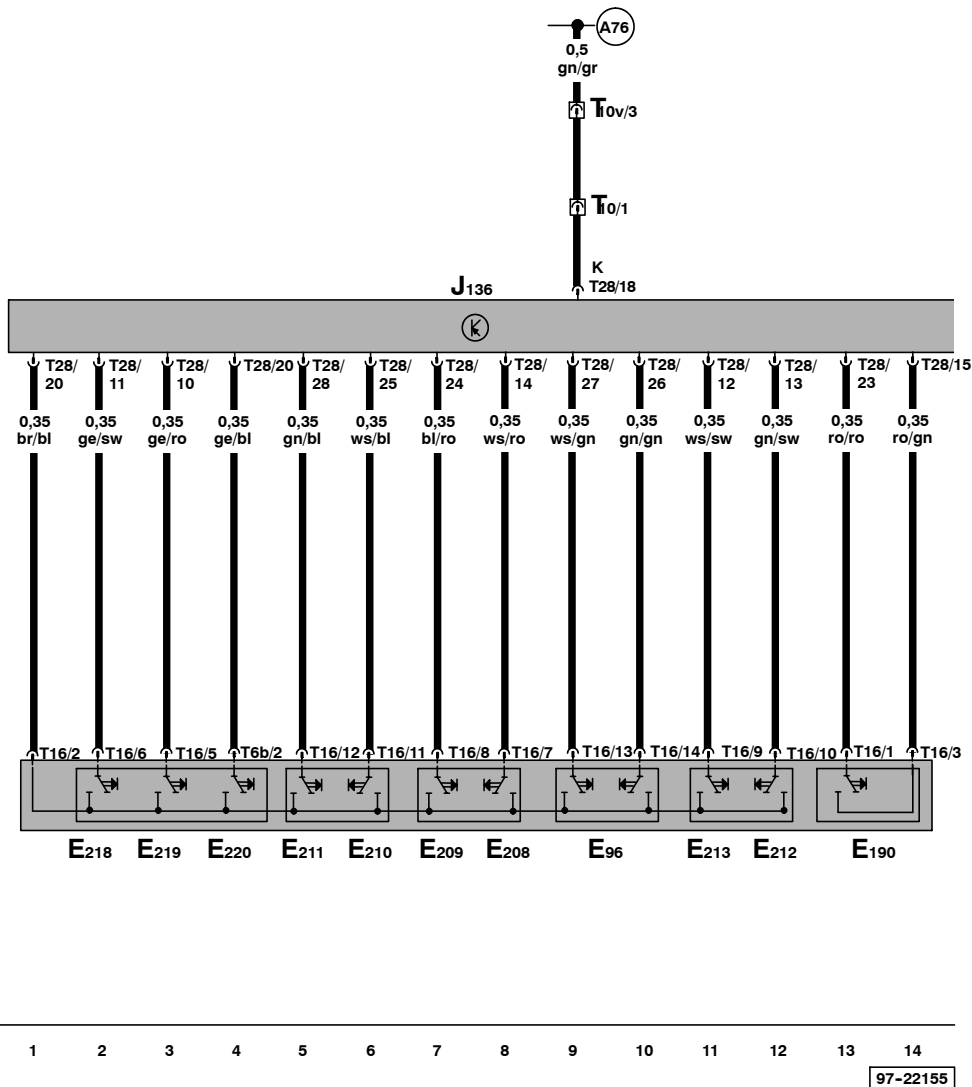

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- E96 - Driver's Backrest Adjustment Switch
- E190 - Seat memory lock-out switch
- E208 - Button for front height adjustment, upwards, driver seat
- E209 - Button for front height adjustment, downwards, driver seat
- E210 - Button for rear height adjustment, upwards, driver seat
- E211 - Button for rear height adjustment, downwards, driver seat
- E213 - Button for length adjustment, backward, driver seat
- E218 - Button for driver 1, memory seat
- E219 - Button for driver 2, memory seat
- E220 - Button for driver 3, memory seat
- J136 - Memory Seat Control Module
- T10 - 10-Pin Connector, brown, near driver's seat

- T10v - 10-Pin Connector, pink, A-pillar, right
- T16 - 16-Pin Connector, On Board Diagnostic (OBD), below instrument panel, left
- A76 - Connector (K-diagnosis wire), in instrument panel wiring harness

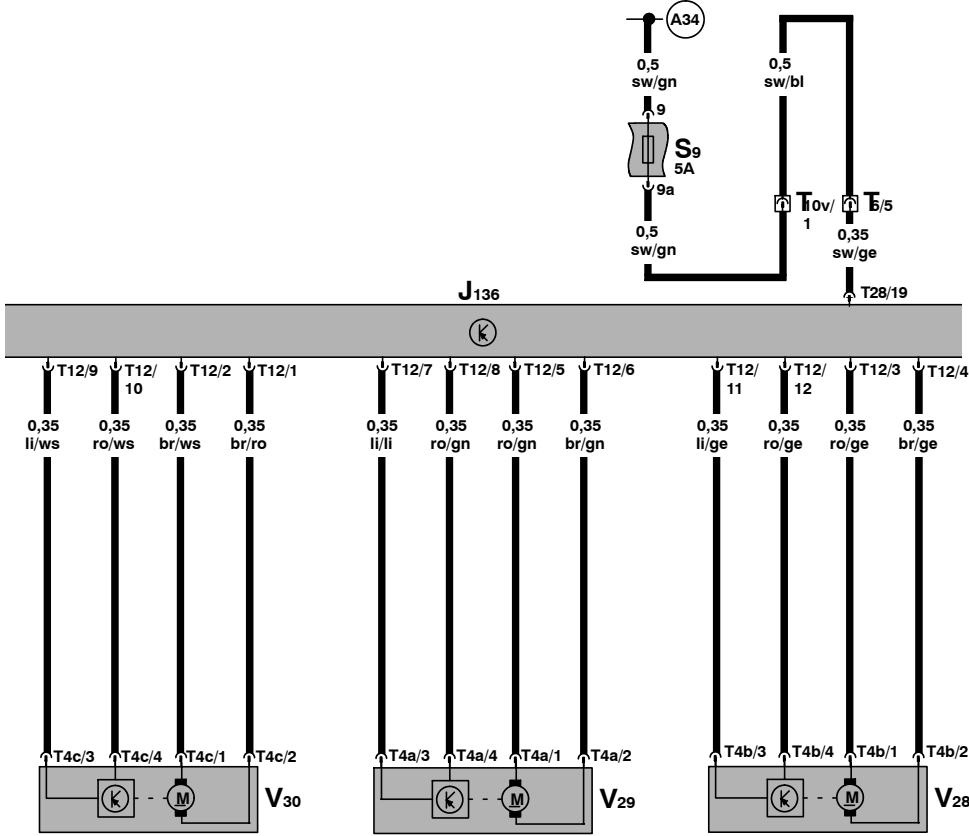


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

15 16 17 18 19 20 21 22 23 24 25 26 27 28

3B3-025030207


- J136 - Memory Seat Control Module
- S9 - Fuse 9 in fuse holder
- T4a - 4-Pin Connector
- T4b - 4-Pin Connector
- T4c - 4-Pin Connector
- T6 - 6-Pin Connector, red, near driver's seat
- T10v - 10-Pin Connector, pink, on A-pillar, right
- T12 - 12-Pin Connector
- V28 - Driver's Seat Fore/Aft Adjusting Motor
- V29 - Driver's Seat Front Height Adjusting Motor
- V30 - Driver's Seat Rear Height Adjusting Motor
- (A37) - wire connection (75x), in instrument panel wiring harness

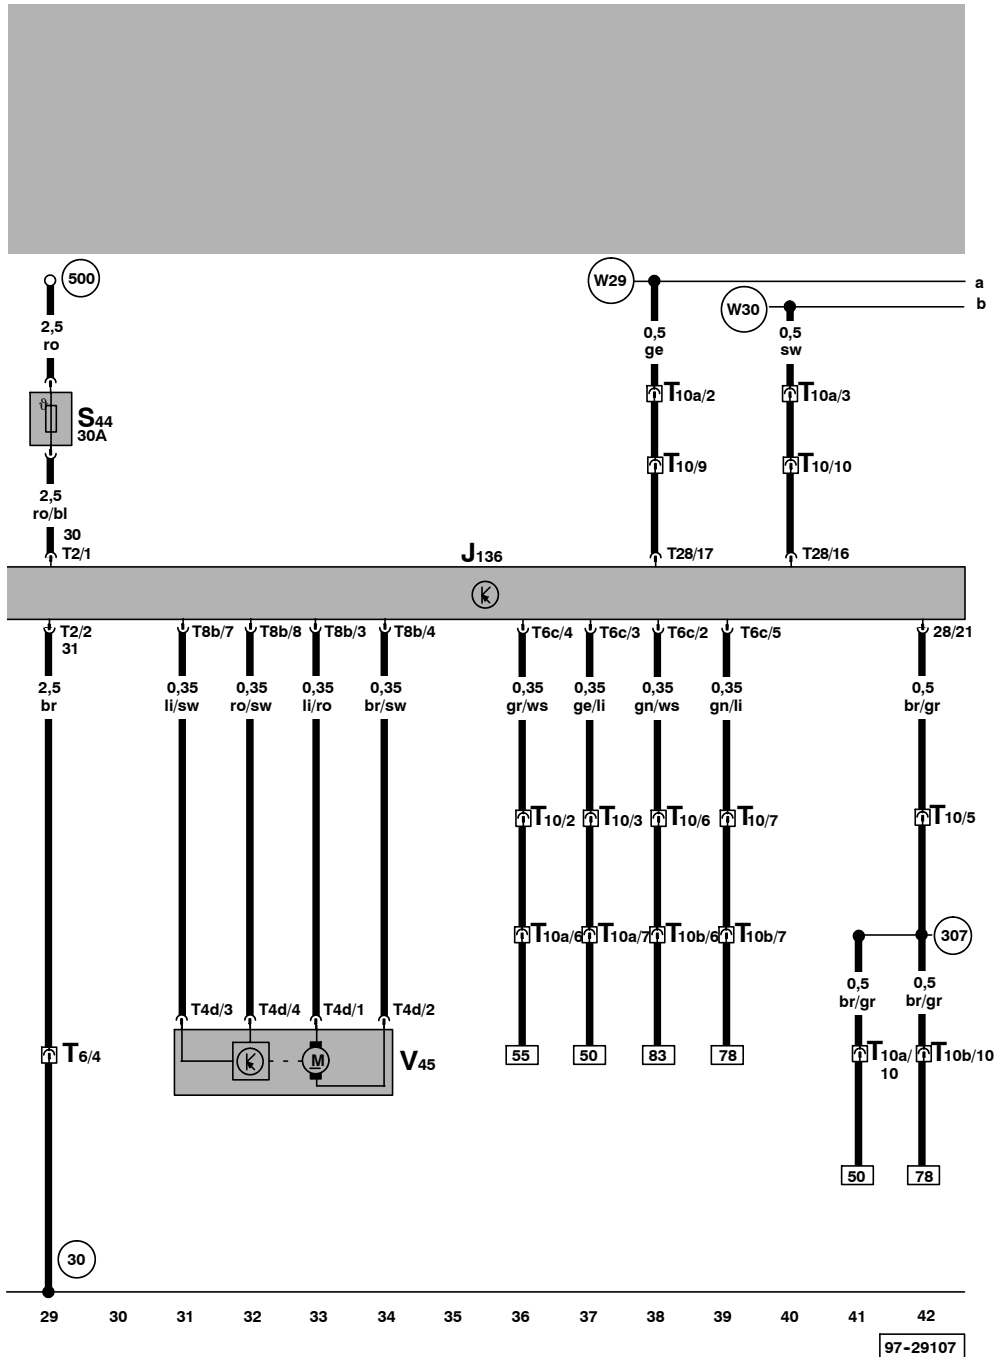

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- J136 - Memory Seat Control Module
- S44 - Power (Memory) Seat Circuit Breaker
- T2 - Double Connector
- T4d - 4-Pin Connector, black
- T6 - 6-Pin Connector
- T6c - 6-Pin Connector
- T8b - 8-Pin Connector
- T10 - 10-Pin Connector, brown
- T10a - 10-Pin Connector, grey, connector station A-pillar, left
- T10b - 10-Pin Connector, green, connector station A-pillar, left
- V45 - Driver's Backrest Adjusting Motor
- (30) - Ground connection, -1-, beside fuse/relay panel

- (307) - Ground connection for sensor (floor wiring harness)
- (500) - Threaded connection -1- (30) on the relay plate
- (W29) - Plus connector -2- (A-Bus), in wiring harness, floor
- (W30) - Plus connector -2- (B-Bus), in wiring harness, floor

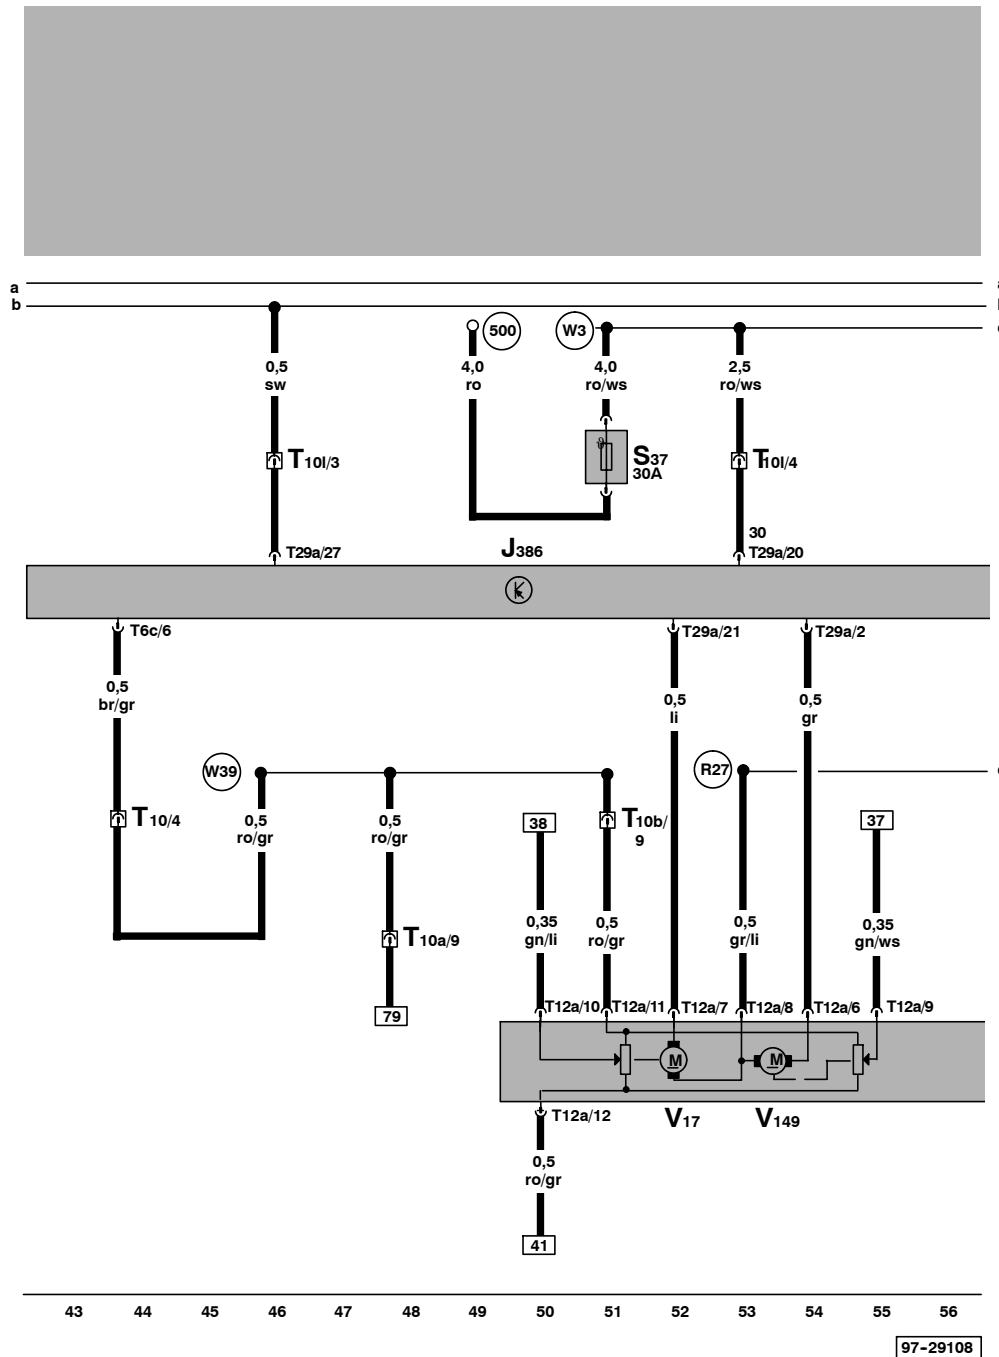


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- J386 - Door control module, driver side
- S37 - Power Window Fuse
- T6c - 6-Pin Connector
- T10 - 10-Pin Connector, brown, near driver's seat
- T10a - 10-Pin Connector, grey, connector station A-pillar, left
- T10b - 10-Pin Connector, grey, connector station A-pillar, right
- T10l - 10-Pin Connector, brown, connector station A-pillar, left
- T12a - 12-Pin Connector
- T29a - 29-Pin Connector
- V17 - Driver's Side Mirror Adjustment Motor
- V149 - Motor for mirror adjustment, driver side

- (R27) - wire Connection (power mirror), in driver's door wiring harness
- (W3) - wire connection, in rear wiring harness
- (W39) - Connection for mirror memory (floor wiring harness)


(500) - Threaded connection -1- (30) on the relay plate

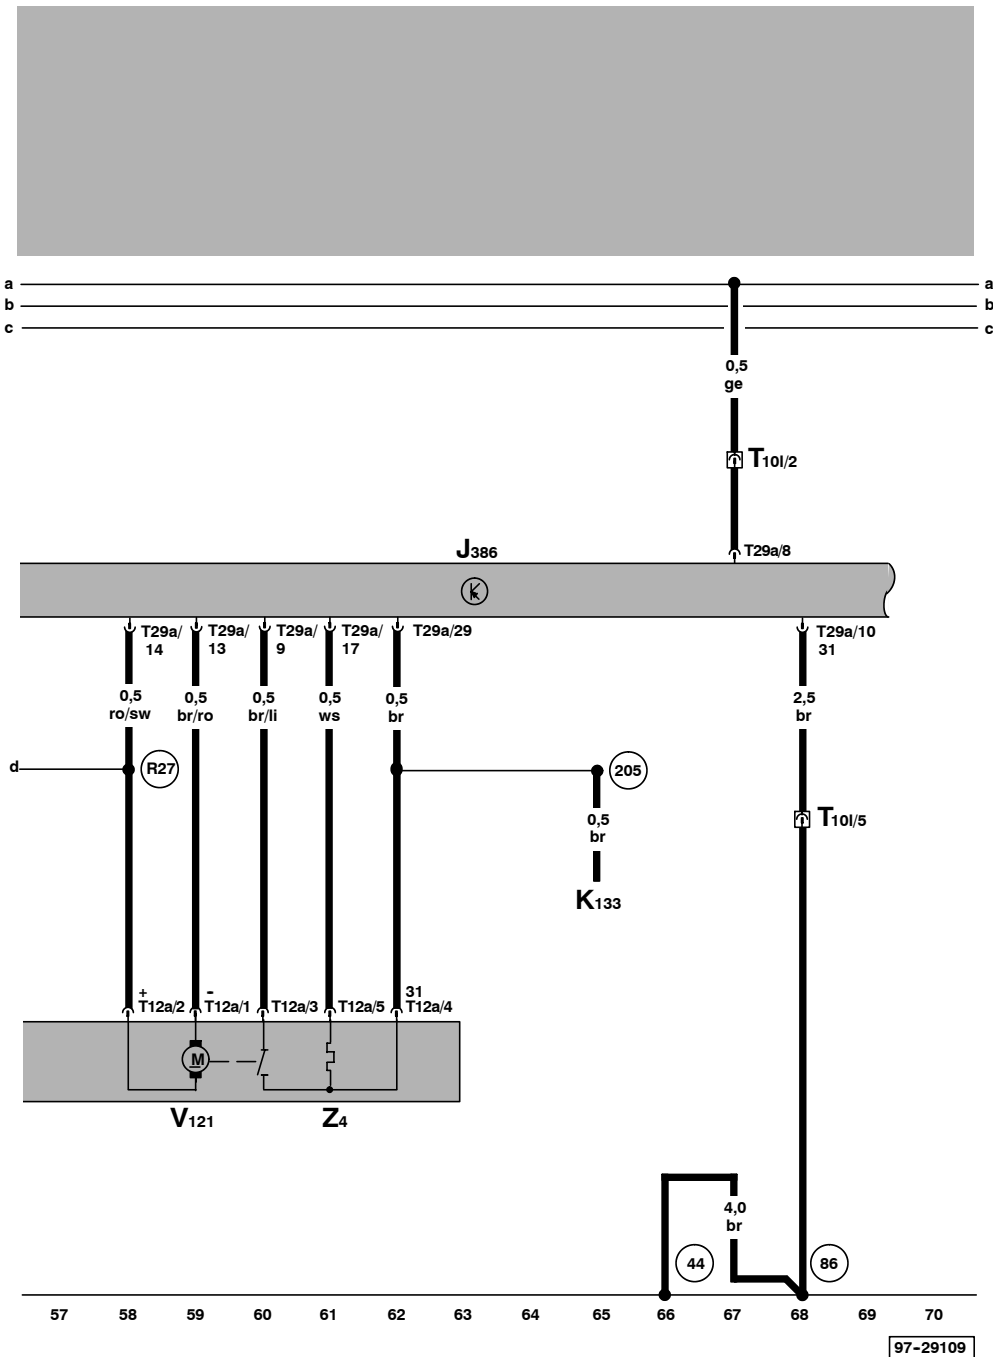

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow


- J386 - Door control module, driver side
- K133 - Warning light for central locking -SAFE-
- T10l - 10-Pin Connector, brown, A-pillar, left
- T12a - 12-Pin Connector
- T29a - 29-Pin Connector
- V121 - Motor for fold-in mirror, driver side
- Z4 - Heated outside mirror, driver side

- (44) - Ground connection, on left A-pillar, lower part
- (86) - Ground connection -1-, in rear wiring harness
- (205) - Ground connection, in drivers door wiring harness
- (R27) - wire Connection (power mirror), in driver's door wiring harness

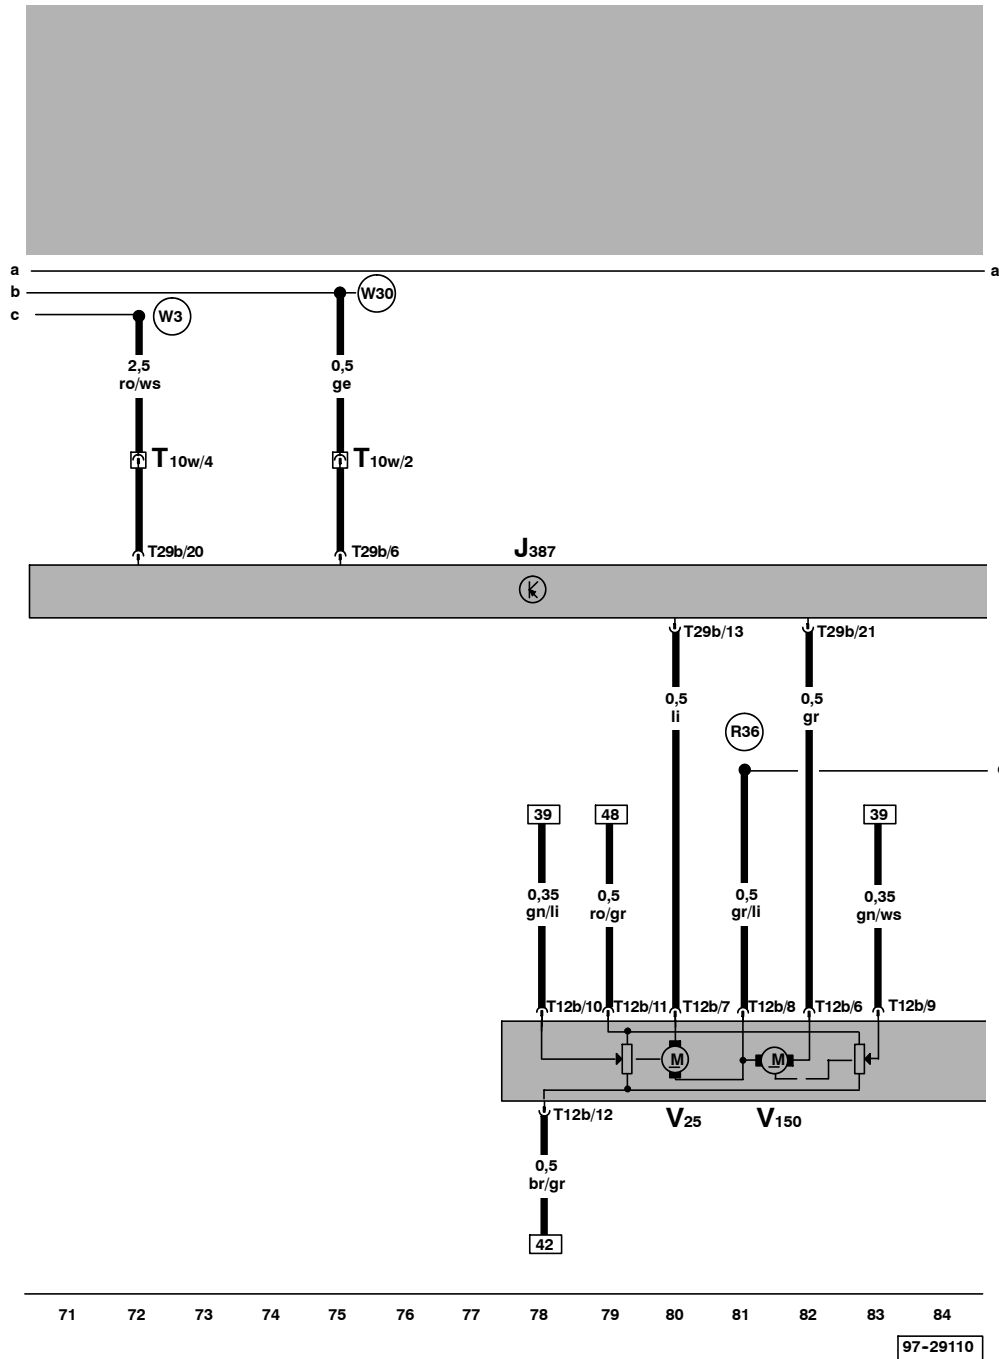

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- J387 - Door control module, passenger side
- T10w- 10-Pin Connector, black, connector station A-pillar, right
- T12b - 12-Pin Connector
- T29b - 29-Pin Connector
- V25 - Passenger's Side Mirror Adjustment Motor
- V150 - Motor for mirror adjustment, passenger side
- (R36) - connection (mirror adjustment), in door wiring harness, passenger side
- (W3) - wire connection, in rear wiring harness
- (W30) - Plus connector -2- (B-Bus), in wiring harness, floor

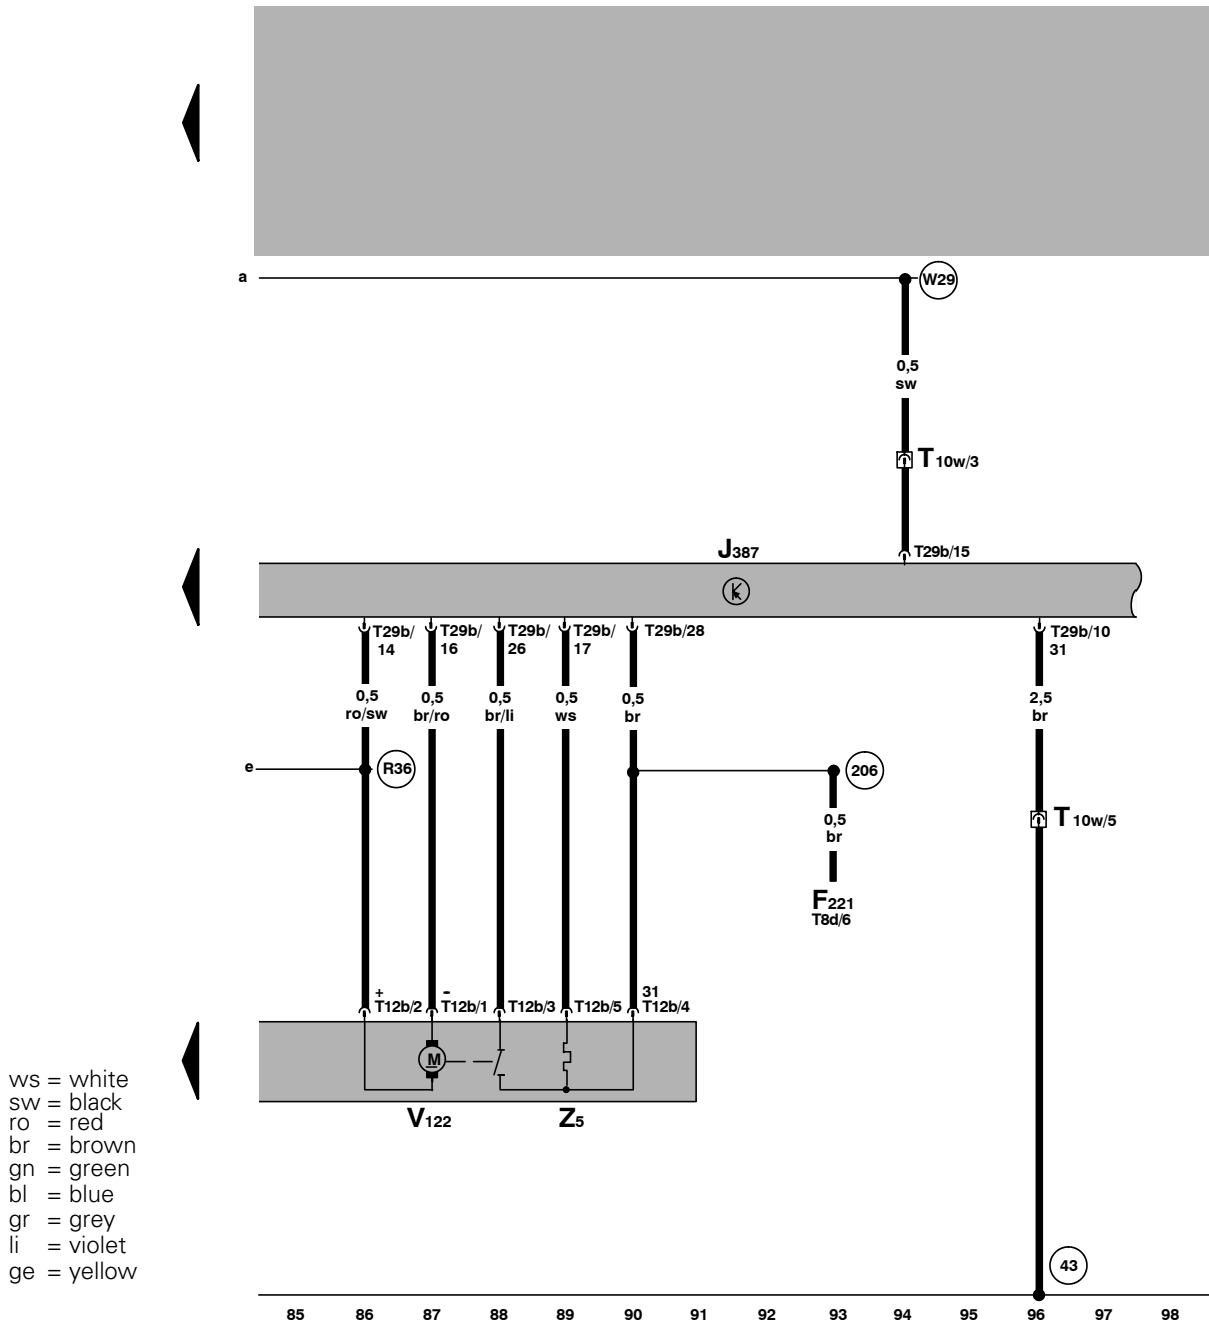

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

- F221 - Lock unit for central locking, passenger side
- J387 - Door control module, passenger side
- T8d - 8-Pin Connector, black, on lock unit for central locking, passenger side
- T10w- 10-Pin Connector, black, connector station A-pillar, right
- T12b - 12-Pin Connector
- T29b - 29-Pin Connector
- V122 - Motor for fold-in mirror, passenger side
- Z5 - Heated outside mirror, passenger side

- (43) - Ground connection, on right A-pillar, lower part
- (206) - Ground connection, in passenger's door wiring harness
- (R36) - connection (mirror adjustment), in door wiring harness, passenger side

(W29) - connection (A-Bus), in floor wiring harness