


Radio System,

from August 1998


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

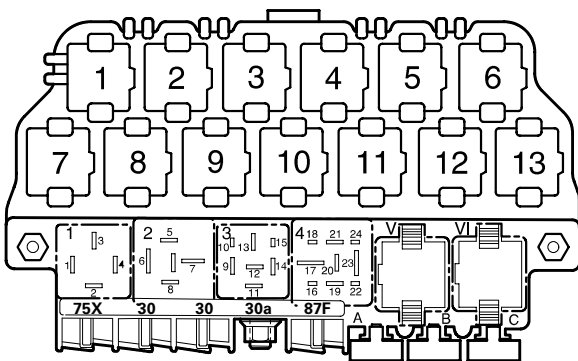

97-20676

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

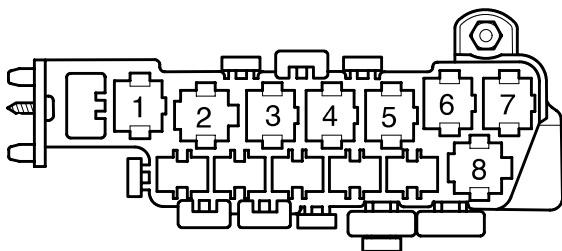


97-20515

Relay location on the eightfold auxiliary relay panel, behind relay panel:

Fuse colors

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

Note: Number in parentheses indicates production control number stamped on relay housing.

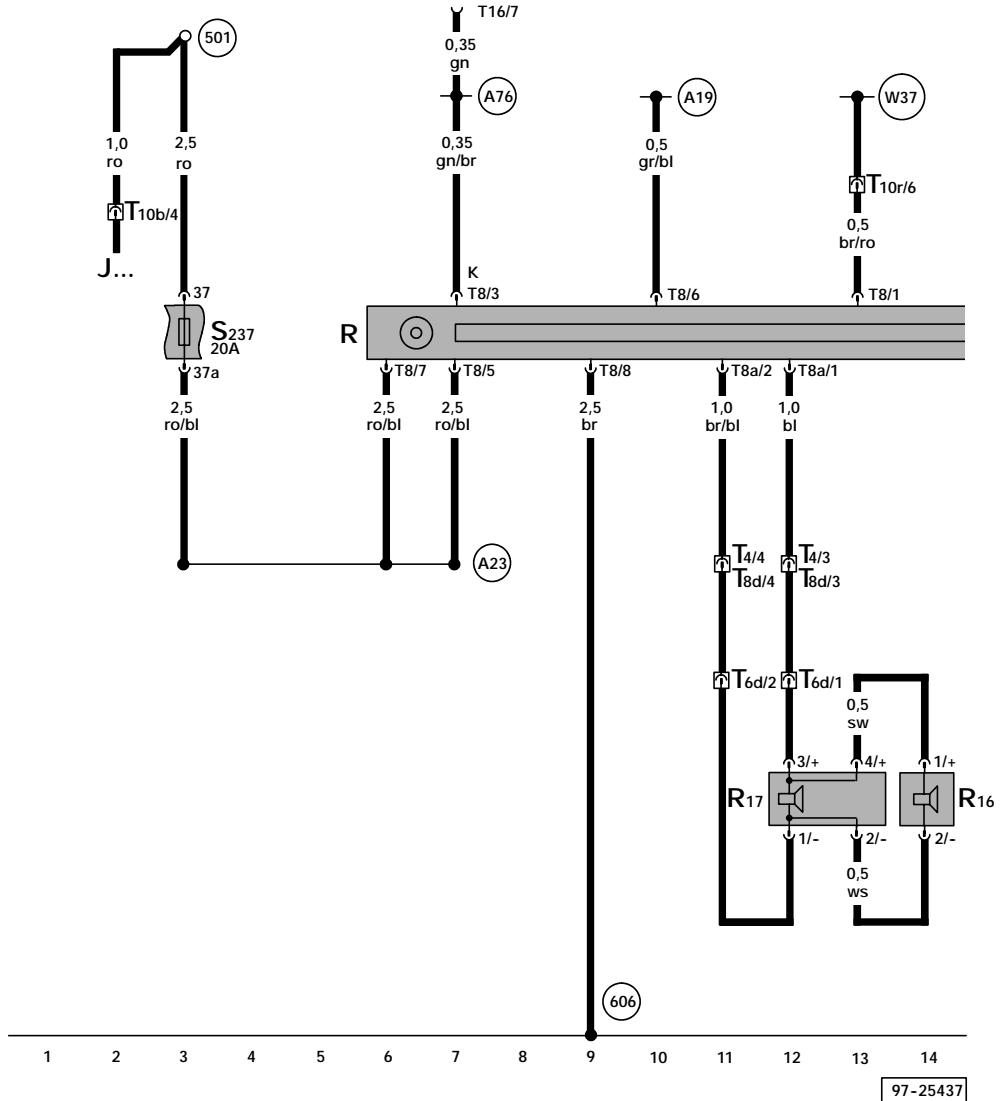


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

97-25437

- J... - Engine Control Module (ECM)
- R - Radio
- R16 - Right Rear Tweeter, in right rear door
- R17 - Right Rear Woofer, in right rear door
- S237 - Fuse 37 in fuse holder
- T4 - 4-Pin Connector, black, connector station A-pillar, right
- T6d - 6-Pin Connector, red, on B-pillar, right
- T8 - 8-Pin Connector, black, on radio
- T8a - 8-Pin Connector, brown, on radio
- T8d - 8-Pin Connector, black, connector station A-pillar, right
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T10r - 10-Pin Connector, violett, connector station A-pillar, right

- T16 - 16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
- (501) - Screw Connection -2- (30), on relay panel
- (606) - Ground Connection (under center console at shifter)
- (A19) - wire connection (58d), in instrument panel wiring harness
- (A23) - wire connection (30al), in instrument panel wiring harness
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness
- (W37) - Connector (alarm system), in wiring harness floor

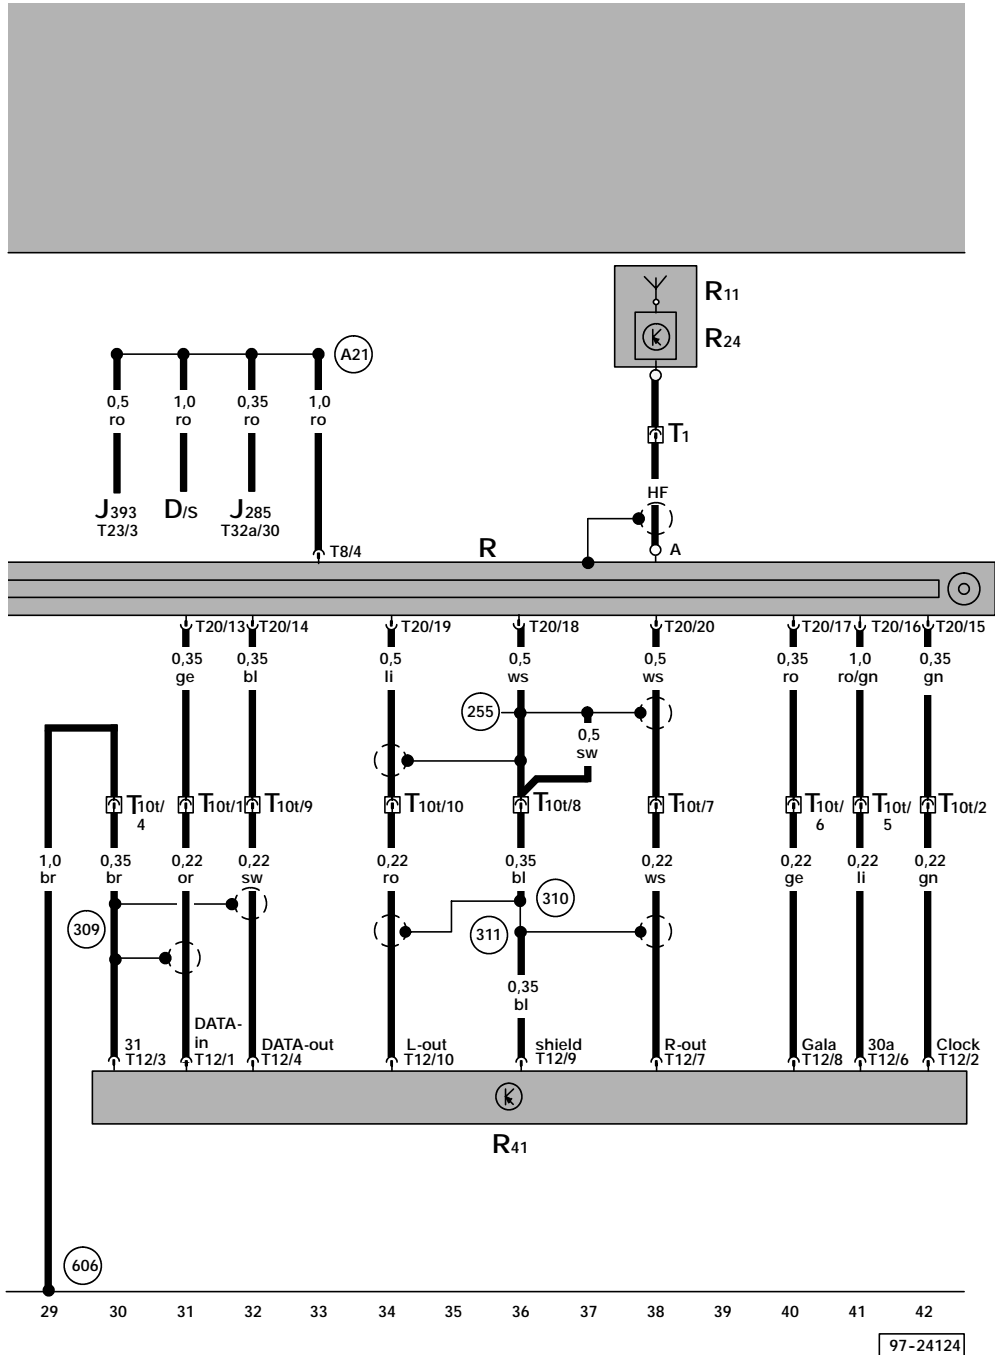

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = violet
 ge = yellow

97-24124

- D - Ignition/Starter Switch
- J285 - Control module with indicator unit in instrument panel insert
- J393 - Central control module for comfort system
- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- R41 - CD Changer Unit
- T1 - 1-Pin Connector, black, below console
- T8 - 8-Pin Connector, black, on radio
- T10t - 10-Pin Connector, red, connector station A-pillar, right
- T12 - 12-Pin Connector, red, on CD Changer Unit
- T20 - 20-Pin Connector, on radio
- T23 - 23-Pin Connector, on central control module for comfort system

- T32a - 32-Pin Connector, blue, on instrument cluster
- (255) - Ground connection, in wiring harness Radio
- (606) - Ground Connection (under center console at shifter)
- (A21) - wire connection (86s), in instrument panel wiring harness
- (309) - Ground Connection 1 (shielding) (in CD changer wiring harness)
- (310) - Ground Connection 2 (shielding) (in CD changer wiring harness)
- (311) - Ground Connection 3 (shielding) (in CD changer wiring harness)