


Radio System

from October 2000


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

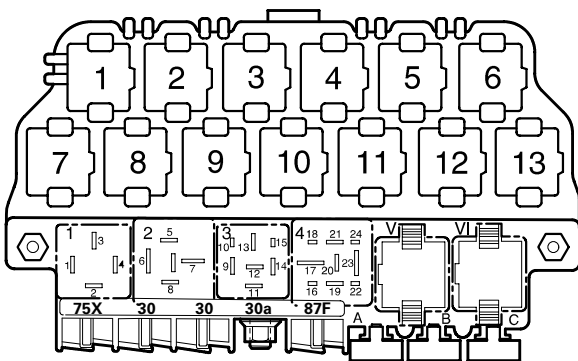

97-20676

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

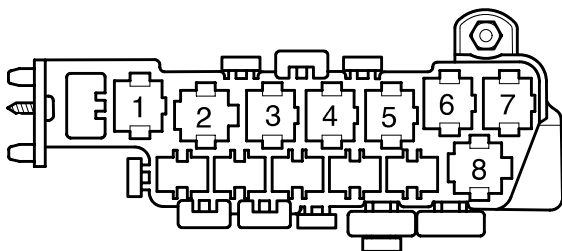



97-20515

Relay location on the eight position auxiliary relay panel, behind relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

Fuse colors

 - 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

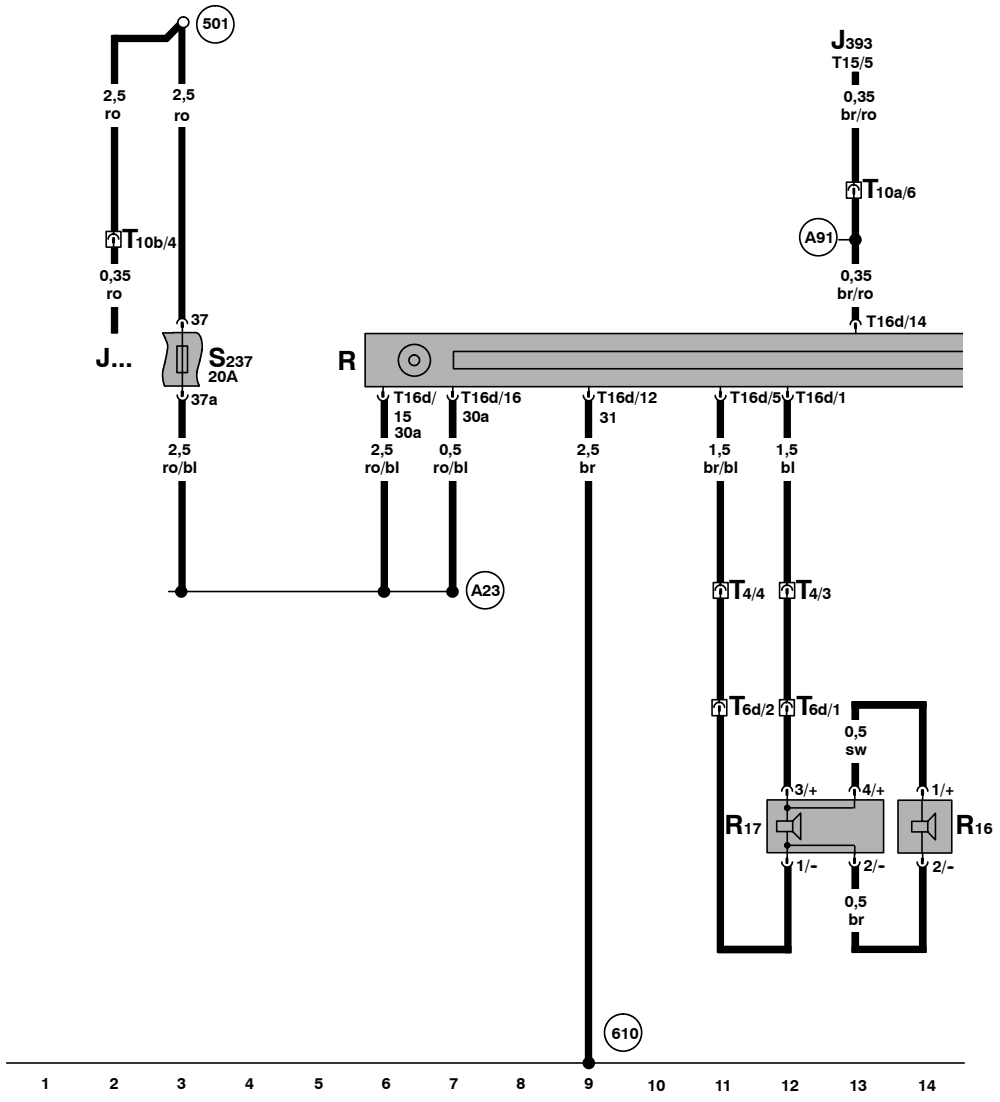


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-29152

- J... - Engine Control Module (ECM)
- J393 - Central control module for comfort system
- R - Radio
- R16 - Treble speaker, right rear, in right rear door
- R17 - Bass speaker, right rear, in right rear door
- S237 - Fuse in fuse holder
- T4 - 4-Pin Connector, black, connector station A-pillar, right
- T6d - 6-Pin Connector, red, on B-pillar, right
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T10b - 10-Pin Connector, black, on protective housing for control module, in engine compartment, left
- T15 - 15-Pin Connector, on Central control module for comfort system
- T16d - 16-Pin Connector, black, on radio



- (501) - Threaded connection -2- (30) on the relay plate
- (610) - Ground Connection (Audio) (under center console, front)
- (A23) - wire connection (30al), in instrument panel wiring harness
- (A91) - Connector (signal for instrument panel insert), in instrument panel wiring harness

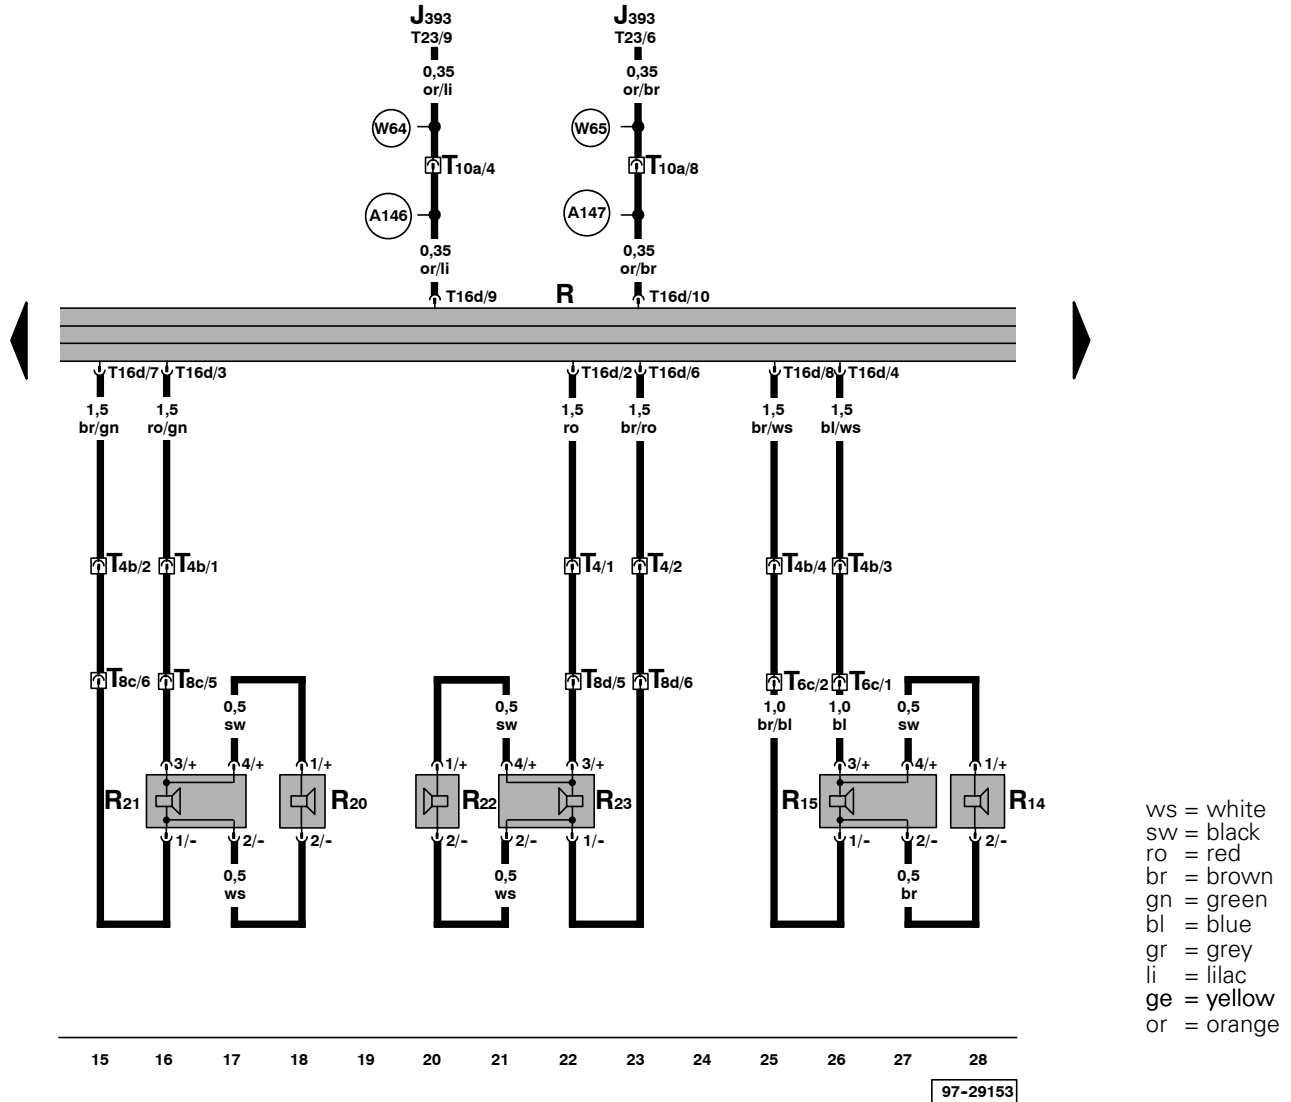

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

- J393 - Central control module for comfort system
- R - Radio
- R14 - Treble speaker, left rear, in left rear door
- R15 - Bass speaker, left rear, in left rear door
- R20 - Treble speaker, left front, in driver's door
- R21 - Bass speaker, left front, in driver's door
- R22 - Treble speaker, right front, in passenger's door
- R23 - Bass speaker, right front, in passenger's door
- T4 - 4-Pin Connector, black, connector station A-pillar, right
- T4b - 4-Pin Connector, black, connector station A-pillar, left
- T6c - 6-Pin Connector, red, on B-pillar, left
- T8c - 8-Pin Connector, black, connector station A-pillar, left

 - T8d - 8-Pin Connector, black, connector station A-pillar, right
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T16d - 16-Pin Connector, black, on radio
- T23 - 23-Pin Connector, on Central control module for comfort system
- A146 - Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 - Comfort System Low-bus Connection (in instrument panel wiring harness)
- W64 - CAN-Bus High Connection - Convenience (in floor wiring harness)
- W65 - CAN-Bus Low Connection - Convenience (in floor wiring harness)

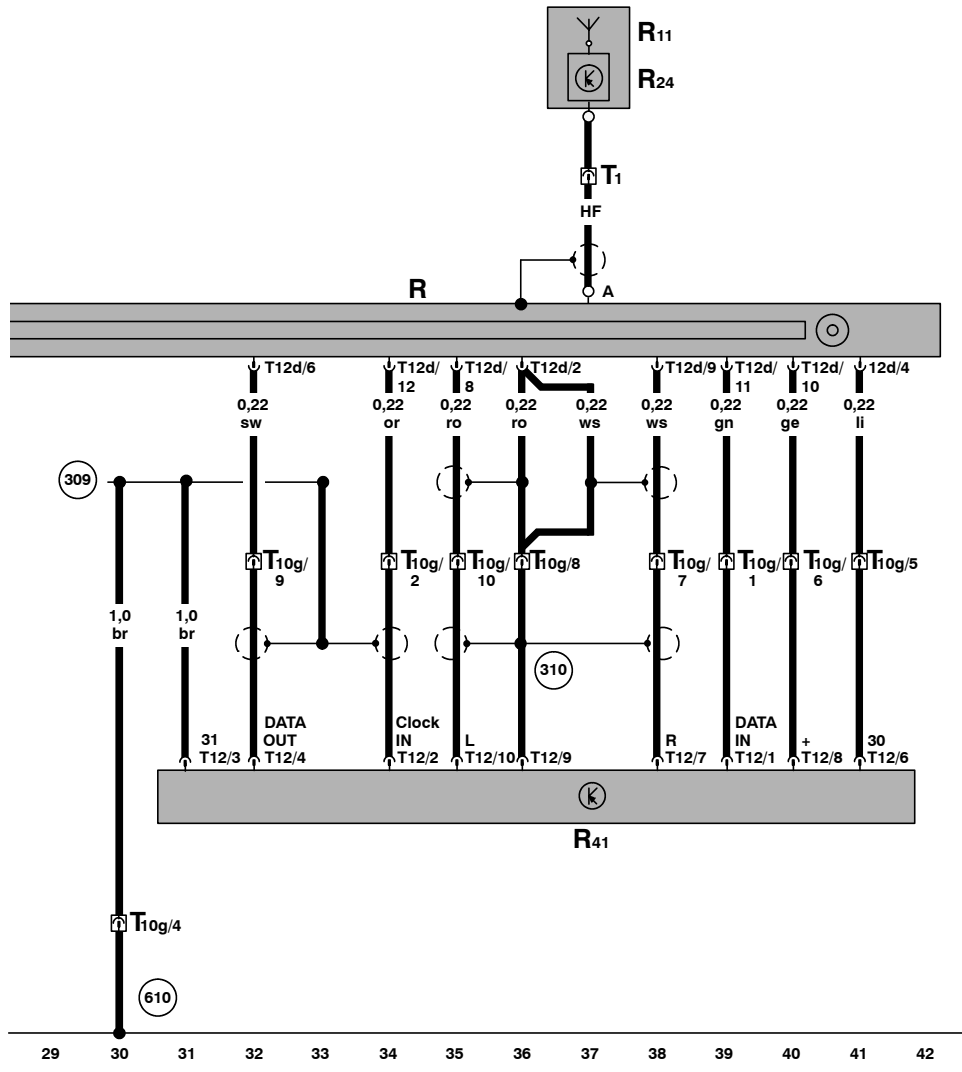

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- R41 - CD Changer Unit, in luggage compartment
- T1 - 1-Pin Connector, black, below console
- T10g - 10-Pin Connector, brown, connector station A-pillar, left
- T12 - 12-Pin Connector, red, on CD Changer Unit
- T12d - 12-Pin Connector, on radio

- (309) - Ground Connection 1 (shielding) (in CD changer wiring harness)
- (310) - Ground Connection 2 (shielding) (in CD changer wiring harness)
- (610) - Ground Connection (Audio) (under center console, front)