


# Radio System - Monsoon

from October 2000


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

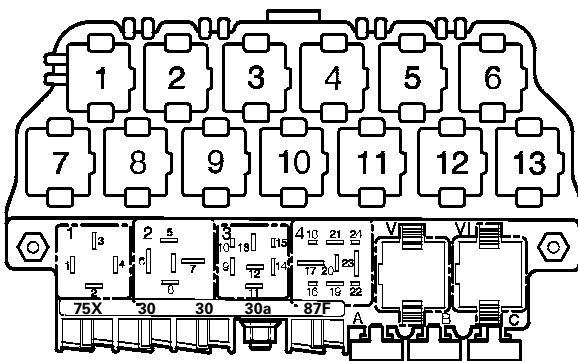

97-20676

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

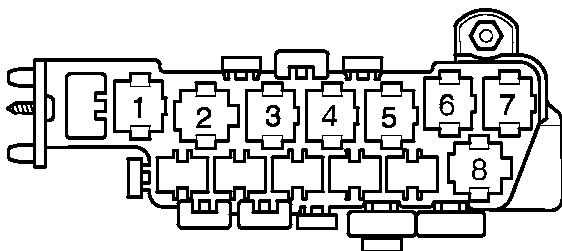


97-20515

Relay location on the eight position auxiliary relay panel, behind relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

**Fuse colors**


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige

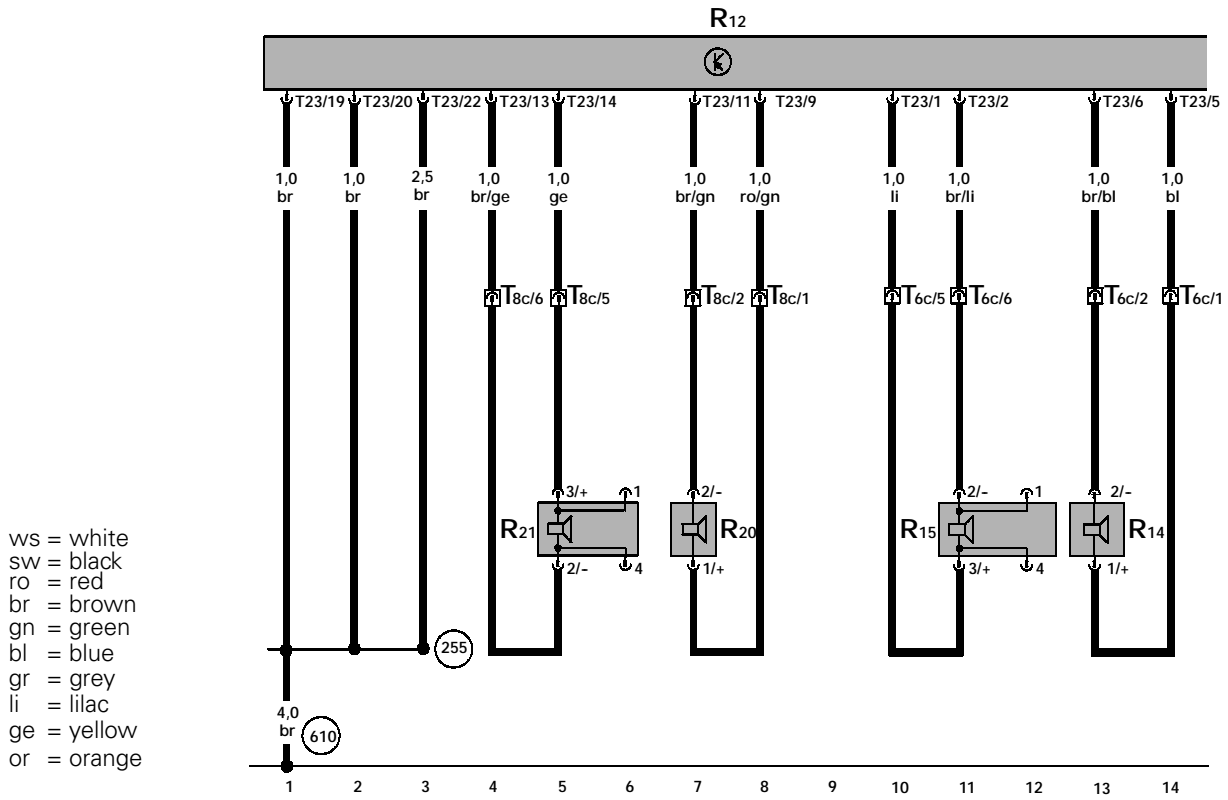

97-29551


- R12 - Amplifier
- R14 - Treble speaker, left rear
- R15 - Bass speaker, left rear
- R20 - Treble speaker, left front
- R21 - Bass speaker, left front
- T6c - 6-Pin Connector, red, on B-pillar, left
- T8c - 8-Pin Connector, black, connector station A-pillar, left
- T23 - 23-Pin Connector, on Amplifier

- (255) - Ground connection, -1-, in wiring harness Radio
- (610) - Ground Connection (Audio) (under center console, front)

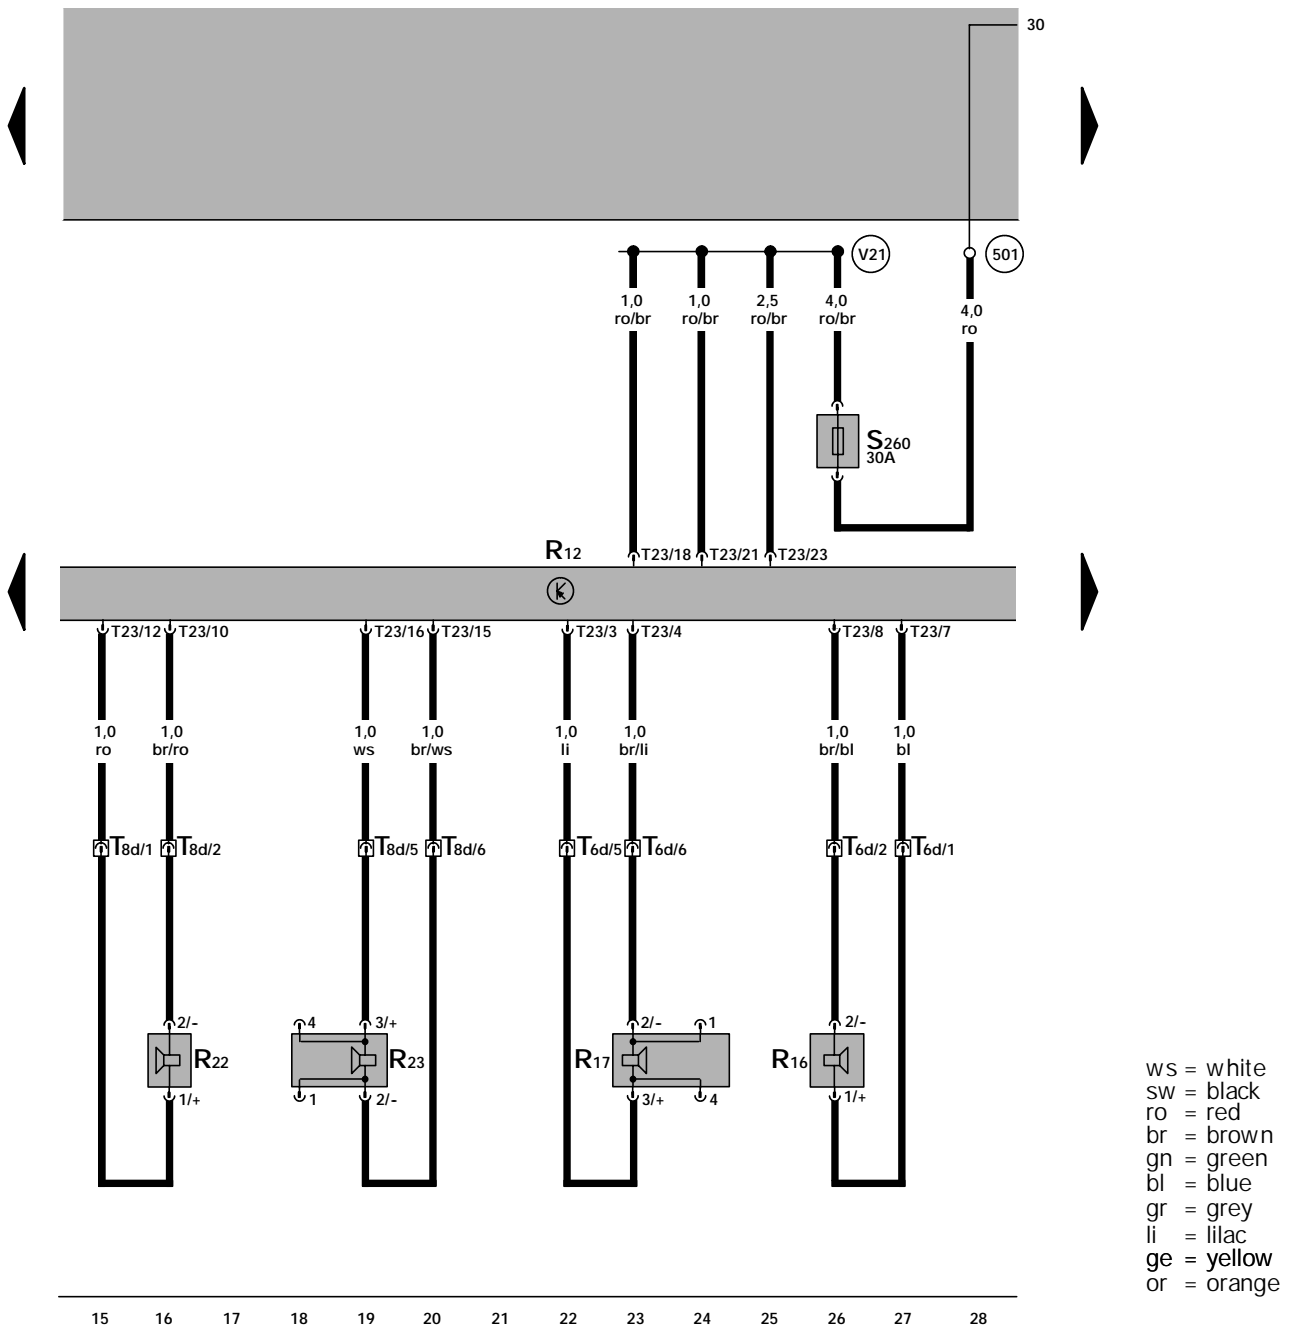

- R12 - Amplifier
- R16 - Treble speaker, right rear
- R17 - Bass speaker, right rear
- R22 - Treble speaker, right front
- R23 - Bass speaker, right front
- S260 - Amplifier/DSP Fuse
- T6d - 6-Pin Connector, red, on B-pillar, right
- T8d - 8-Pin Connector, black, connector station A-pillar, right
- T23 - 23-Pin Connector, on Amplifier

- (501) - Threaded connection -2- (30) on the relay plate
- (V21) - Plus connector (30), in wiring harness Radio-Amplifier

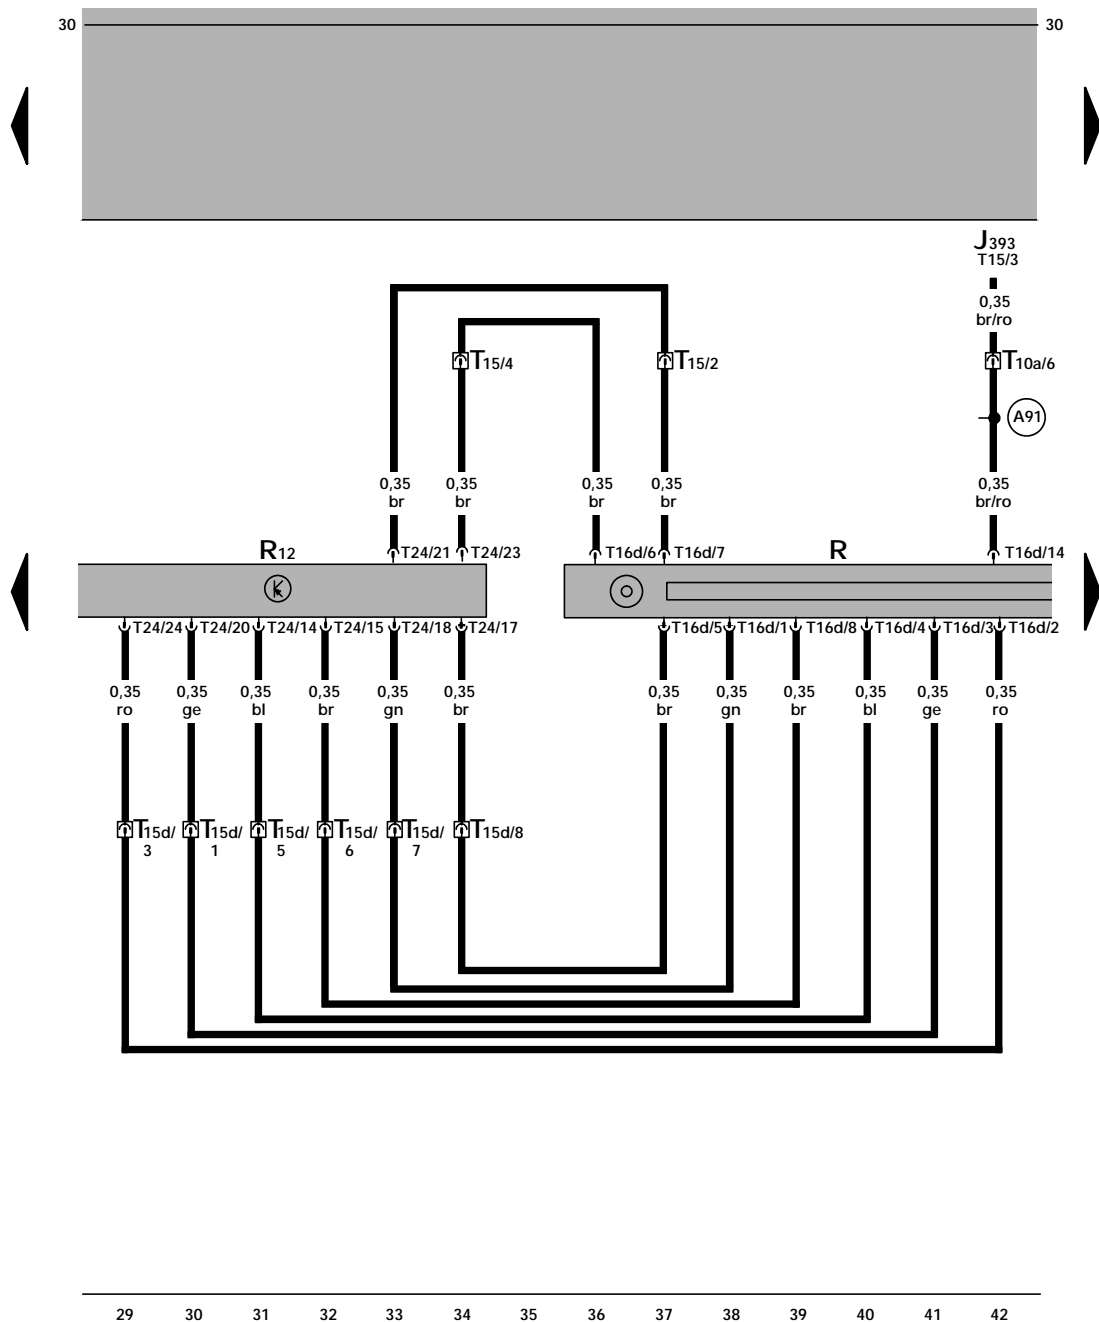


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

97-29553

- J393 - Central control module for comfort system
- R - Radio
- R12 - Amplifier
- T10a - 10-Pin Connector, brown, connector station A-pillar, left
- T15 - 15-Pin Connector, on Central control module for comfort system
- T15d - 15-Pin Connector, white, connector station A-pillar, left
- T16d - 16-Pin Connector, black, on radio
- T24 - 24-Pin Connector, on Amplifier

(A91) - Connector/Wire connection, in instrument panel wiring harness

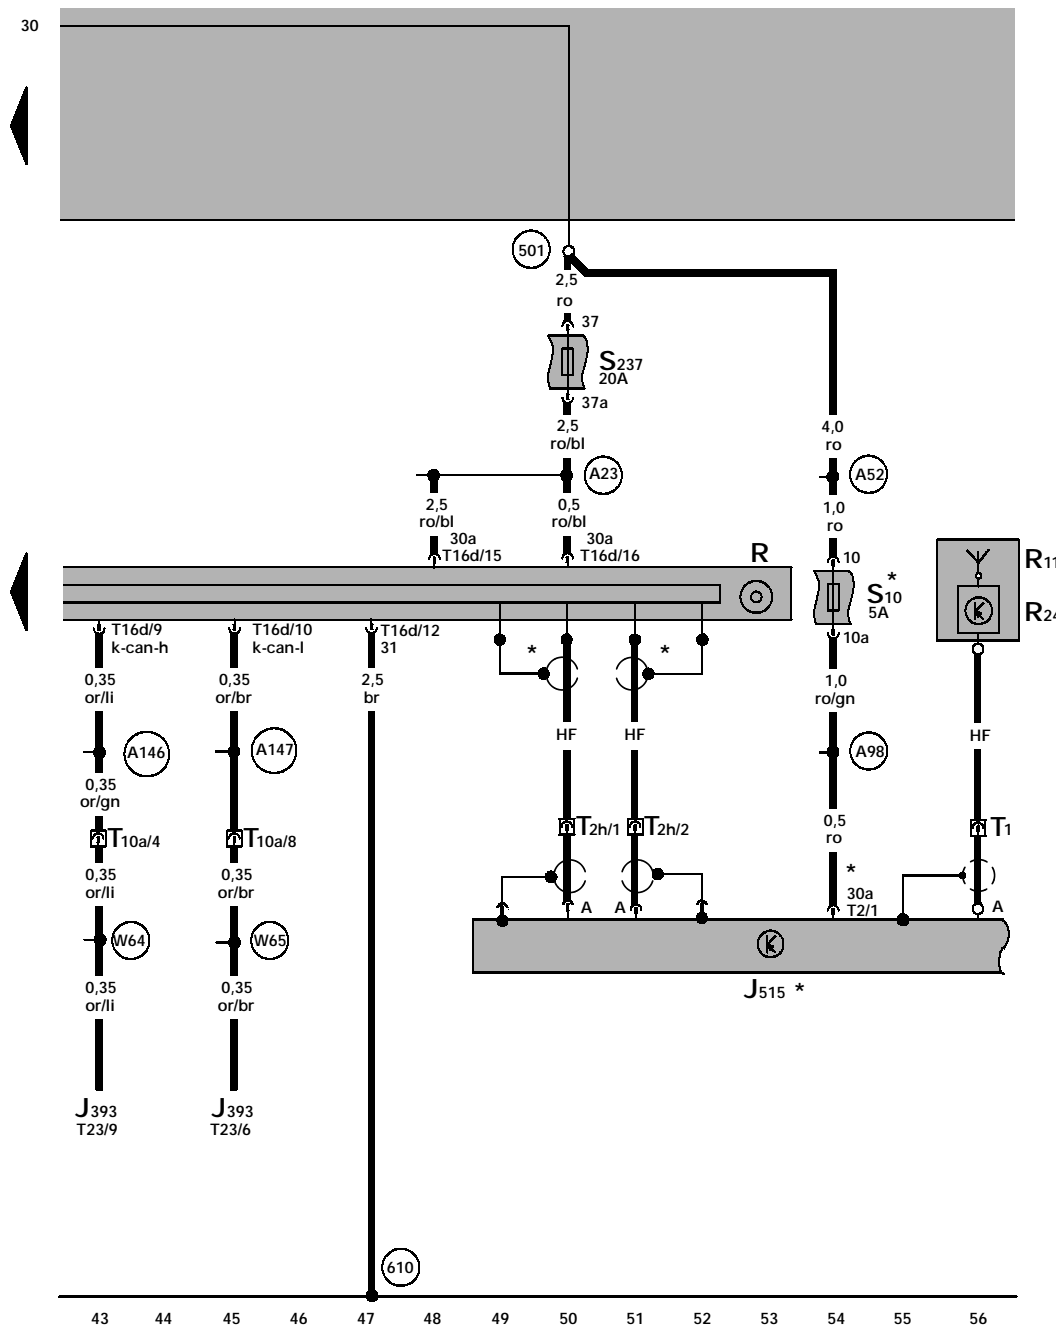

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

- J393 - Central control module for comfort system
- J515 - Antenna Selection Control Module
- R - Radio
- R11 - Antenna
- R24 - Antenna Amplifier
- S10 - Fuse
- S237 - Fuse 37 in fuse holder
- T1 - 1-Pin Connector, black, below console
- T2 - 2-Pin Connector, black
- T2h - 2-Pin Connector, black
- T10a - 10-Pin Connector, brown
- T16d - 16-Pin Connector, black, on radio
- T23 - 23-Pin Connector
- 501 - Threaded connection -2- (30) on the relay plate
- 610 - Ground Connection (Audio) (under center console, front)

- A23 - wire connection (30a1), in instrument panel wiring harness
- A52 - Plus Connection 2 (30) (in instrument panel wiring harness)
- A98 - Plus connector -4- (30), in instrument panel wiring harness
- A146 - Comfort System High-bus Connection (in instrument panel wiring harness)
- A147 - Comfort System Low-bus Connection (in instrument panel wiring harness)
- W64 - CAN-Bus High Connection - Convenience (in floor wiring harness)
- W65 - CAN-Bus Low Connection - Convenience (in floor wiring harness)
- \* - from m.y. 2003 where applicable