


Garage door opener - HomeLinkR

from October 2000


Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

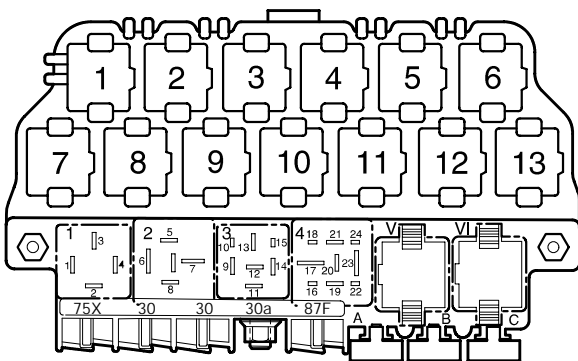

97-20676

Relay location on the thirteen position auxiliary relay panel, above relay panel:

Relay panel:

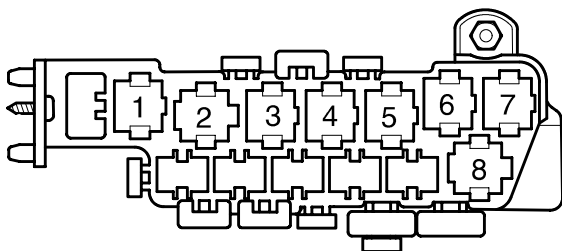


97-20515

Relay location on the eight position auxiliary relay panel, behind relay panel:

Note: Number in parentheses indicates production control number stamped on relay housing.

- Fuse colors
- 30 A - green
 - 25 A - white
 - 20 A - yellow
 - 15 A - blue
 - 10 A - red
 - 7,5 A - brown
 - 5 A - beige

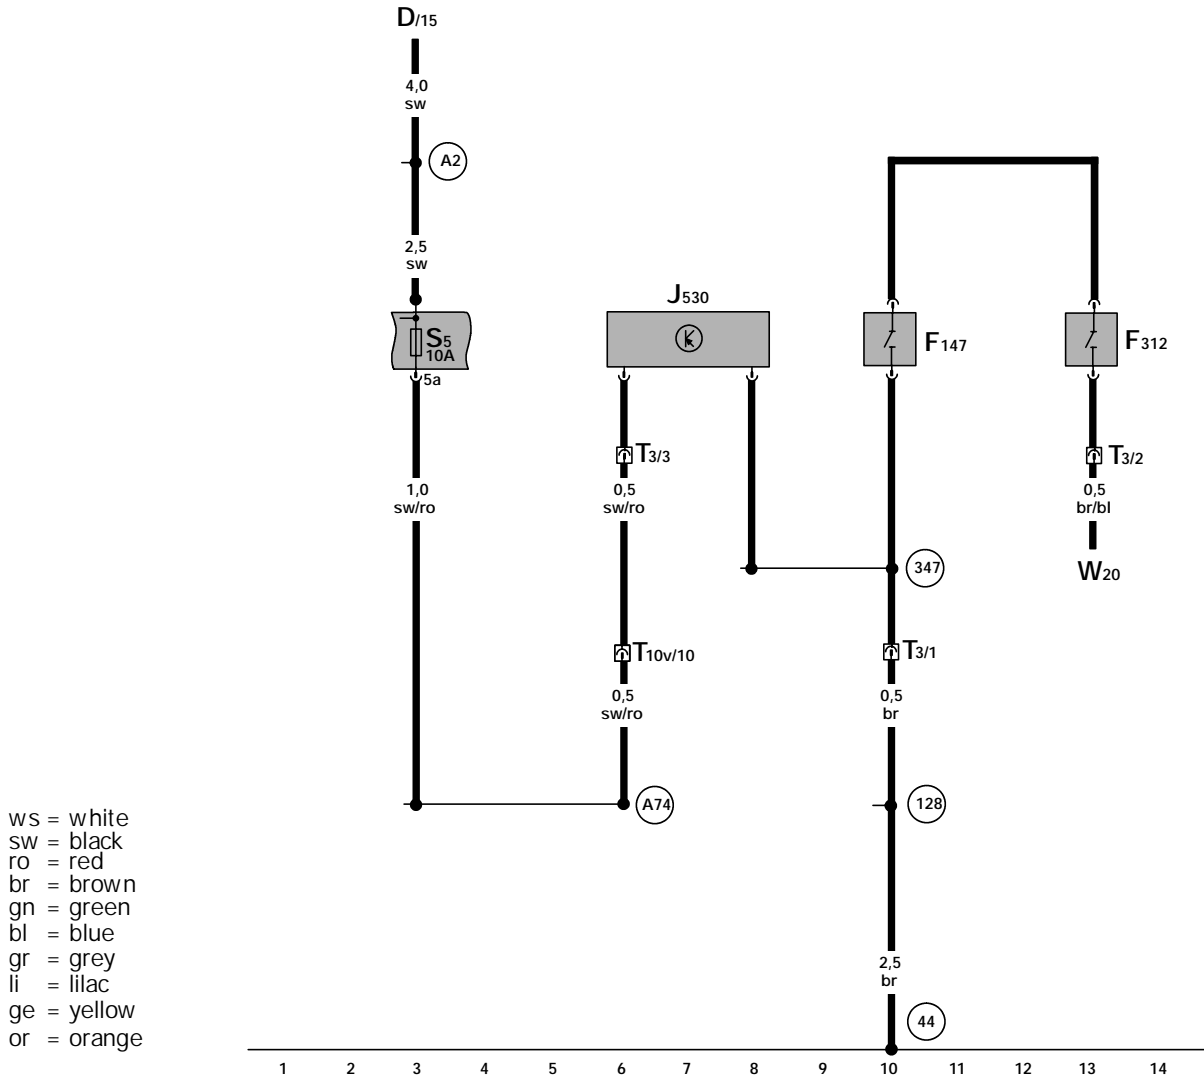

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

97-30102

- D - Ignition/Starter Switch
- J530 - Garage Door Opener Control Module
- S5 - Fuse
- T3 - 3-Pin Connector
- T10v - 10-Pin Connector, green, connector station A-pillar, left
- W20 - Left Make-Up Mirror Light
- F147 - Left Make-Up Mirror Light Switch
- F312 - Mirror sliding cover contact Switch, drivers side

- (44) - Ground connection, on left A-pillar, lower part
- (128) - Ground connection -1-, in interior light wiring harness
- (347) - Ground Connection (in roof wiring harness)
- (A2) - plus connection (15), in instrument panel wiring harness
- (A74) - Connector (15a - fuse 5) in instrument panel wiring harness