Generator (GEN) warning lamp does not go out with speed increase
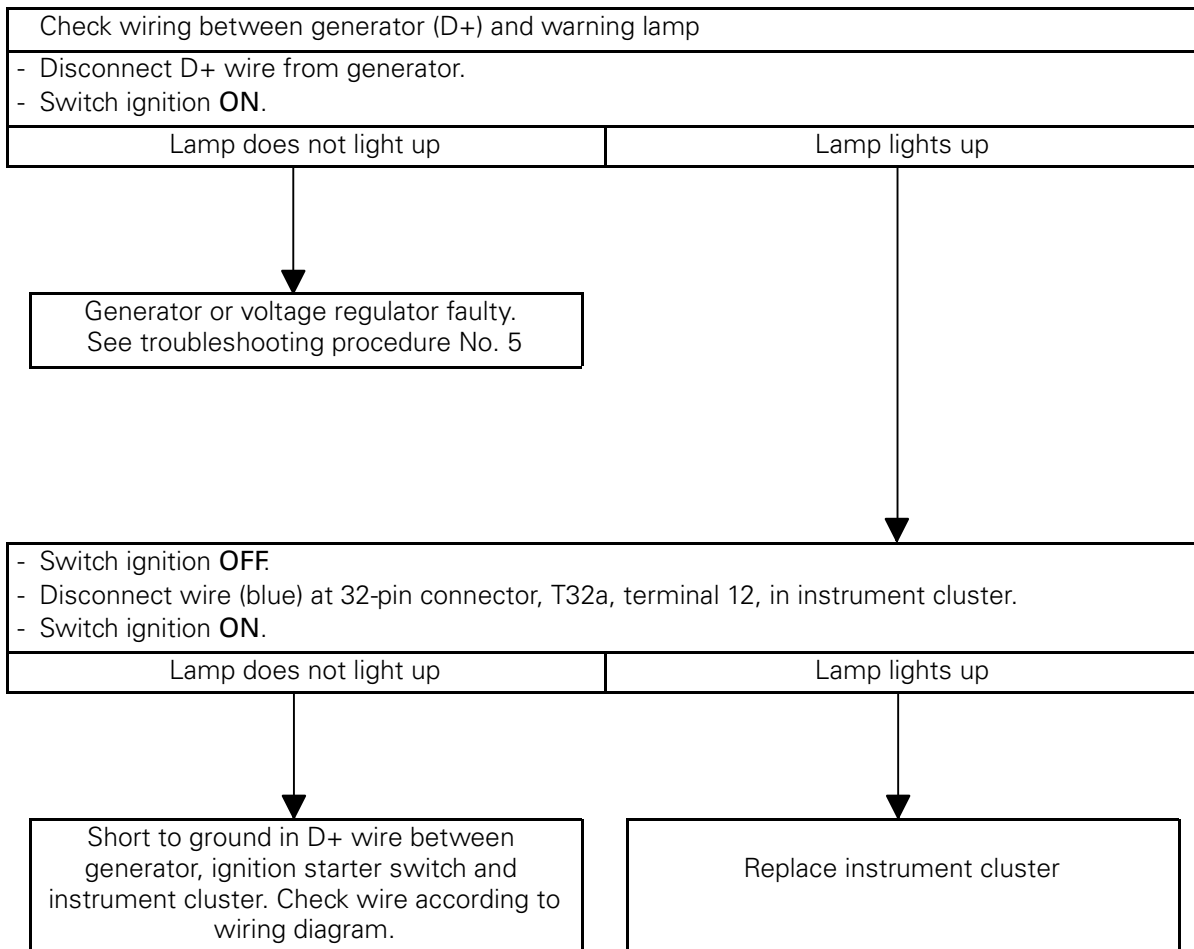
Check wiring between generator (D+) and warning lamp	
- Disconnect D+ wire from generator. - Switch ignition **ON**.	
Lamp does not light up	Lamp lights up

↓

Generator or voltage regulator faulty.   See troubleshooting procedure No. 5

↓

- Switch ignition **OFF**. - Disconnect wire (blue) at 32-pin connector, T32a, terminal 12, in instrument cluster. - Switch ignition **ON**.	
Lamp does not light up	Lamp lights up

Short to ground in D+ wire between generator, ignition starter switch and instrument cluster. Check wire according to wiring diagram.	Replace instrument cluster

END